

HAKUOPAS TULOSTIMIIN

toner.fi HAKUOPAS TULOSTIMIIN		01.08.2016
Huom! Tämä hakuopas on voimassa vain tuotteille, jotka on tilattu toner.fi:n kautta.		
Note! This cross-reference guide is only valid for products supplied through toner.fi.		
L = laser, Z = inkjet/geeli, # = tuote poistettu/product delisted, [] = ei vielä valikoimissa/product not yet listed		
Tulostin, jota etsit:	Tulostimen käyttämä väri:	
Acer LP-75/76	L Ricoh PC 6000 #	
Alps MD-5500	Z OKI DP-5000 #	
Apple Color LaserWriter 12/600PS,12/660PS	L Lexmark Optra C #	
Apple Color Printer	Z Canon BJI-643 #	
Apple Color StyleWriter 1500	Z Canon BC-05 #	
Apple Color StyleWriter 2200	Z Canon BC-10 #	
Apple Color StyleWriter 2400/2500	Z Canon BC-20	
Apple Color StyleWriter/Pro	Z Canon BJI-201 #	
Apple LaserWriter	L Canon EP #	
Apple LaserWriter 12/640PS/Plus	L IBM NP 12 #	
Apple LaserWriter 16/600PS	L HP 92298A #	
Apple LaserWriter 4/600PS	L HP 92274A #	
Apple LaserWriter 8500	L IBM InfoPrint 20 #	
Apple LaserWriter II/F/G/NT/NTX/SC	L Canon EP-S #	
Apple LaserWriter Pro 600/630/800	L HP 92298A #	
Apple LaserWriter Pro 810	L Xerox 4215 #	
Apple LaserWriter Select 300/310/360/610	L Apple #	
Apple Personal LaserWriter 300/320	L HP 92274A #	
Apple Personal LaserWriter LS/NT/NTR/SC	L Canon EP-L #	
Apple Portable StyleWriter	Z Canon BC-02 #	
Apple StyleWriter	Z Canon BC-02 #	
Apple StyleWriter II/1200/1500	Z Canon BC-02 #	
AST Turbo Laser/Plus	L Ricoh Tonerkit 80 #	
Blaser Blaserstar II	L Sanyo SPX-608 #	
Brother HJ-100/100i/400	Z Canon BC-02 #	
Brother HJ-770	Z Canon BJI-642 #	
Brother HL-1030	L Brother TN-6600	
Brother HL-1040/1050/1060/1070	L Brother TN-300 #	
Brother HL-1110/1112	L Brother TN-1050	
Brother HL-1230/1240/1250/1270N	L Brother TN-6600	
Brother HL-1260/1260e/1660/2060	L HP 92298A #	
Brother HL-1430/1440/1450/1470N	L Brother TN-6600	
Brother HL-1650/1670N/1850/1870N	L Brother TN-7600 #	
Brother HL-2030/2040/2070N	L Brother TN-2000	
Brother HL-2035	L Brother TN-2005	
Brother HL-2130/2135W	L Brother TN-2010	
Brother HL-2140/2150N/2170W	L Brother TN-2120	[TN-2110]
Brother HL-2240D/2250DN/2270DW	L Brother TN-2220	[TN-2210]
Brother HL-2460	L HP C4127X	
Brother HL-2700CN	L Brother TN-04 #	
Brother HL-3040CN/3070CW	L Brother TN-230	
Brother HL-3140CW/3150CDW/3170CDW	L Brother TN-241/TN-245	
Brother HL-4/HL-6	L Canon EP-L #	
Brother HL-4000CN	L Brother TN-11 #	
Brother HL-4040/4050/4070	L Brother TN-135	
Brother HL-4140CN/4150CDN/4570CDWT	L Brother TN-325	[TN-328]
Brother HL-4200CN	L [Brother TN-12]	
Brother HL-5030/5040/5050/5070N	L Brother TN-7600 #	
Brother HL-5130/5140/5150D/5170DN	L Brother TN-3060	
Brother HL-5240/5250DN/5270DN/5280DW	L Brother TN-3170	
Brother HL-5340/5350/5370/5380	L Brother TN-3280	[TN-3230]
Brother HL-5440D/5450DN/5470DW/6180DW T	L Brother TN-3380	[TN-3330][TN-3390]
Brother HL-6050/6050D/6050DN	L Brother TN-4100 #	
Brother HL-630/631/660/WL-660	L Brother TN-100 #	
Brother HL-7050/7050N	L Brother TN-5500 #	
Brother HL-720/730/730Plus/760	L Brother TN-200 #	
Brother HL-8/HL-8e/HL-10	L Canon EP-S #	
Brother HL-P2500	L Brother TN-6600	
Brother LP 10/15	L Kyocera TK-4 #	
Brother LP 20	L Kyocera TK-3 #	
Brother LW-700 (IN-700)	Z Lexmark 13400HCE #	

HAKUOPAS TULOSTIMIIN

Brother MC-3000/HC-2500	Z Brother LC01BK #	
C.Itoh CI-4/CI-6/CI-8	L TEC 1305/MT904 #	
Calcomp CCL 600	L HP C3900A #	
Calcomp TechJET 5500	Z Calcomp TechJet 5500 #	
Canon BIJ 1300/1350/D/2300/2350	Z [Canon BCI-1201]	
Canon BJ-10e/10ex/10sx/20	Z Canon BC-02 #	
Canon BJ-130/130e	Z Canon BJI-481 #	
Canon BJ-200/200ex/230	Z Canon BC-02 #	
Canon BJ-30	Z Canon BC-10 #	
Canon BJ-300/330	Z Canon BJI-642 #	
Canon BJC-150/210/240/250/1000	Z Canon BC-02 #	
Canon BJC-2000/2100	Z Canon BC-20	
Canon BJC-3000	Z Canon BC-30e	
Canon BJC-4000/4100/4200/4300/N	Z Canon BC-20	
Canon BJC-4400/4550/4650/W/5500	Z Canon BC-20	
Canon BJC-50/55/70/80/85	Z Canon BC-10 #	
Canon BJC-5000/5100	Z Canon BC-23/21e	
Canon BJC-600/600e/610/620	Z Canon BJI-201 #	
Canon BJC-6000/6100/6200/S/6500	Z Canon BC-30e	
Canon BJC-7000/7100	Z [Canon BC-60/62]	
Canon BJC-800/820/880	Z Canon BJI-643 #	
Canon BJC-8200	Z Canon BCI-6	
Canon BJC-8500	Z [Canon BC-80/BCI-8]	
Canon BJ-W3000/W3050	Z [Canon BC-1000/BCI-1002]	
Canon BJ-W9000	Z [Canon BC-1100/BCI-1101]	
Canon BN-22/BN-100C/BN-120/C/BN-200	Z Canon BJI-101 #	
Canon BN-700	Z Canon BC-10 #	
Canon C LBP 360PS	L Lexmark Optra C #	
Canon C LBP 400/460PS	L HP Color LaserJet 4500 #	EP-83
Canon CP100/200/220/300/330	Z Canon KP-36IP	
Canon CP400/500/510/600/710	Z Canon KP-36IP	
Canon CP-660	L HP Color LaserJet 8500 #	
Canon i250/i320/i350	Z Canon BCI-24 #	
Canon i450/i455/i470D/i475D	Z Canon BCI-24 #	
Canon i550/i850	Z Canon BCI-3eBK	
Canon i560	Z Canon BCI-3eBK/BCI-6	
Canon i6500	Z Canon BCI-3eBK	
Canon i70/i80	Z Canon BCI-15	
Canon i865	Z Canon BCI-6	
Canon i905D/i950/i965/i990	Z Canon BCI-6	
Canon i9100/i9500/i9950	Z Canon BCI-6	
Canon imagePRESS C1	[Canon C-EXV19]	
Canon imagePRESS C6000VP	[Canon C-EXV20/C-EXV25]	
Canon imagePRESS C7000VP	[Canon C-EXV20]	
Canon iPF500/iPF600/iPF610/iPF650/iPF700/iPF710/iPF750/iPF755	Z [Canon PFI-102]	
Canon iPF5000/iPF5100/iPF6100	Z [Canon PFI-101]	
Canon iPF8000/iPF8100/iPF9000/iPF9100	Z [Canon PFI-301]	
Canon iR C624	L HP Color LaserJet 8500 #	
Canon LBP1000	L HP C4096A	EP-32
Canon LBP1120	L HP C4092A	
Canon LBP1210	L HP C7115X	EP-25
Canon LBP1260/1260C/Plus,EX-kon.	L HP 92298A	EP-E
Canon LBP1660/1760/e/N/PS	L HP C4127X	EP-52
Canon LBP20	L HP LaserJet 2000 #	
Canon LBP2000/2000N	L Canon EP-65 #	
Canon LBP2040	L HP Color LaserJet 4500 #	EP-83
Canon LBP2410	L Canon EP-87 #	
Canon LBP2460/2460E	L HP LaserJet 5Si #	
Canon LBP2900/3000	L HP Q2612A	703 Cartridge
Canon LBP3010/3100	L Canon 712 Cartridge	
Canon LBP3200	L Canon EP-27	
Canon LBP3250	L Canon 713 Cartridge	
Canon LBP3260	L HP C4182X #	EP-72
Canon LBP3300/3360	L Canon 708H Cartridge	[708 Cartridge]
Canon LBP3310/3370	L Canon 715 Cartridge	[715H Cartridge]
Canon LBP3460	L Canon 710H Cartridge #	[710 Cartridge]
Canon LBP4/Plus/Lite,LX-koneisto	L Canon EP-L #	
Canon LBP460/465/660	L HP C3906A #	EP-A
Canon LBP4U/4i/430W,PX-koneisto	L HP 92274A #	EP-P
Canon LBP5000/5100	L Canon 707 Cartridge	

HAKUOPAS TULOSTIMIIN

Canon LBP5050/n	L Canon 716 Cartridge	
Canon LBP5200	L Canon 701 Cartridge #	
Canon LBP5300/5360	Z Canon 711 Cartridge	
Canon LBP5960/5970/5975	L [Canon 702 Cartridge Bk/C/M/Y]	
Canon LBP6000/6000B/6020/6020B/6030/6030B	L Canon 725 Cartridge	
Canon LBP6200/6230	L Canon 726 Cartridge	
Canon LBP6300/6310/6650/6670/6680	L Canon 719H Cartridge	[719 Cartridge]
Canon LBP6750/6780	L Canon 724H Cartridge	[724 Cartridge]
Canon LBP7010C/7018C	L Canon 729 Cartridge Bk/C/M/Y	
Canon LBP7100/LBP7110	L Canon 731 Cartridge Bk/C/M/Y	
Canon LBP7200/7210/7660/7680	L Canon 718 Cartridge Bk/C/M/Y	
Canon LBP7750	L Canon 723 Cartridge Bk/C/M/Y	
Canon LBP7780	L Canon 732 Cartridge Bk/C/M/Y	
Canon LBP800/810	L HP C4092A	EP-22
Canon LBP-8II/III,SX-koneisto	L Canon EP-S #	
Canon LBP-8IV/1260/1260C/Plus,EX-kon.	L HP 92298A #	EP-E
Canon LBP-8AI/8A2,CX-koneisto	L Canon EP #	
Canon LBP-BX,BX-koneisto	L HP C3900A #	
Canon LBP-NX(EP-N)	L HP LaserJet IIIiSi #	
Canon MAXIFY iB4050/iB4150	Z Canon PGI-2500XL	
Canon MAXIFY iB4140	Z [Canon PGI-2400XL]	
Canon MAXIFY MB2050/MB2150/MB2350/MB2750	Z Canon PGI-1500XL	
Canon MAXIFY MB5050/MB5150/MB5350/MB5450	Z Canon PGI-2500XL	
Canon MF3010	L Canon 725 Cartridge	
Canon MF3110/MF3220/MF3240	L Canon EP-27	
Canon MF4010/MF4120/MF4140/MF4150/MF4270	Canon FX-10	
Canon MF4320/MF4330/MF4340/MF4350/MF4370/MF4380	Canon FX-10	
Canon MF4410/MF4430/MF4450/MF4550/MF4570/MF4580	L Canon 728 Cartridge	
Canon MF4660PL/MF4690PL	Canon FX-10	
Canon MF4730/MF4750/MF4780/MF4870/MF4890	L Canon 728 Cartridge	
Canon MF5630/MF5650/MF5730/MF5750/MF5770	L Canon EP-27	
Canon MF5840/MF5880/MF5940/MF5980	L Canon 719H Cartridge	[719 Cartridge]
Canon MF6530/MF6540/MF6550/MF6560/MF6580	L Canon 706 Cartridge	
Canon MF6680	L [Canon 720 Cartridge]	
Canon MF7170i	L Canon 705 Cartridge	
Canon MF8030/MF8040/MF8050/MF8080	L Canon 716 Bk/C/M/Y	
Canon MF8180C	L Canon 701 Bk/C/M/Y #	
Canon MF8230/MF8280	L Canon 731 Cartridge Bk/C/M/Y	
Canon MF8330/MF8340/MF8350/MF8360/MF8380	L Canon 718 Bk/C/M/Y	
Canon MF8450	L Canon 711 Bk	[717 C/M/Y]
Canon MF8540/MF8550/MF8580	L Canon 718 Bk/C/M/Y	
Canon MF9130/MF9170/MF9220/MF9280	L Canon 711 Bk/C/M/Y	
Canon MP360/MP370/MP390	Z Canon BCI-24 #	
Canon MP700 Photo/MP730 Photo	Z Canon BCI-3eBK	
Canon MPC190	Z Canon BCI-24 #	
Canon MPC200 Photo	Z Canon BCI-24 #	
Canon MPC400/MPC600F	Z Canon BCI-3eBK	
Canon MultiPASS C100	Z Canon BC-30e	
Canon MultiPASS C20/C30/C50	Z Canon BC-20/BX-20	
Canon MultiPASS C70/C75/C80	Z Canon BX-20	
Canon N1000/N2000	Z [Canon BCI-1201]	
Canon PIXMA iP100/iP110	Z [Canon PGI-35/CLI-36]	
Canon PIXMA iP1500/iP2000	Z Canon BCI-24 #	
Canon PIXMA iP1600/iP1700/iP1900	Z Canon PG-40/CL-41	
Canon PIXMA iP1800/iP2500/iP2600	Z Canon PG-40/CL-41	[PG-37/CL-38]
Canon PIXMA iP2200	Z Canon PG-40/50,CL-41/51	
Canon PIXMA iP2700	Z Canon PG-510/CL-511	[PG-512/CL-513]
Canon PIXMA iP2840	Z [Canon PG-445/CL-446]	
Canon PIXMA iP2850	Z [Canon PG-545/CL-546]	
Canon PIXMA iP3000	Z Canon BCI-3eBK/BCI-6	
Canon PIXMA iP3300/iP3500	Z Canon PGI-5/CLI-8	
Canon PIXMA iP3600/iP4600/iP4700	Z Canon PGI-520/CLI-521	
Canon PIXMA iP4000/iP4000R	Z Canon BCI-6	
Canon PIXMA iP4200/iP4300/iP4500/iP5200/iP5300	Z Canon PGI-5/CLI-8	
Canon PIXMA iP4840	Z [Canon PGI-425/CLI-426]	
Canon PIXMA iP4850/iP4950	Z Canon PGI-525/CLI-526	
Canon PIXMA iP5000	Z Canon BCI-6	
Canon PIXMA iP6000/iP8500	Z Canon BCI-6	
Canon PIXMA iP6210D/iP6220D	Z Canon CL-41/CL-51/CL-52	
Canon PIXMA iP6600D/iP6700D	Z Canon CLI-8	

HAKUOPAS TULOSTIMIIN

Canon PIXMA iP7250/iP8750	Z Canon PGI-550/CLI-551	
Canon PIXMA iP8740	Z [Canon PGI-450/CLI-451]	
Canon PIXMA iP90/iP90v	Z Canon BCI-16 #	
Canon PIXMA iX4000	Z Canon PGI-5/CLI-8	
Canon PIXMA iX5000	Z Canon PGI-5/CLI-8	
Canon PIXMA iX6550	Z Canon PGI-525/CLI-526	
Canon PIXMA iX6840	Z [Canon PGI-450/CLI-451]	
Canon PIXMA iX6850	Z Canon PGI-550/CLI-551	
Canon PIXMA iX7000	Z [Canon PGI-7/PGI-9]	
Canon PIXMA mini 220	Z Canon BCI-16 #	
Canon PIXMA mini 260	Z [Canon CLI-36]	
Canon PIXMA MG2150/MG2250/MG3150/MG3250/MG3550/MG3650	Z Canon PG-540/CL-541	
Canon PIXMA MG2450/MG2550	Z [Canon PG-545/CL-546]	
Canon PIXMA MG3640	Z [Canon PG-440/CL-441]	
Canon PIXMA MG4150/MG4250	Z Canon PG-540/CL-541	
Canon PIXMA MG5140/MG5240/MG6140/MG8140	Z [Canon PGI-425/CLI-426]	
Canon PIXMA MG5150/MG5250/MG5350/MG6150/MG6250	Z Canon PGI-525/CLI-526	
Canon PIXMA MG5450/MG5550/MG5650/MG6350/MG6450/MG7150	Z Canon PGI-550/CLI-551	
Canon PIXMA MG5740/MG6840/MG7740	Z [Canon PGI-470/CLI-471]	
Canon PIXMA MG5750/MG5751/MG5752/MG5753	Z [Canon PGI-570/CLI-571]	
Canon PIXMA MG6850/MG6851/MG6852/MG6853	Z [Canon PGI-570/CLI-571]	
Canon PIXMA MG7140	Z [Canon PGI-450/CLI-451]	
Canon PIXMA MG7750/MG7751/MG7752/MG7753	Z [Canon PGI-570/CLI-571]	
Canon PIXMA MG8150/MG8250	Z Canon PGI-525/CLI-526	
Canon PIXMA MP110/MP130	Z Canon BCI-24 #	
Canon PIXMA MP150/MP160/MP170/MP180	Z Canon PG-40/50,CL-41/51	
Canon PIXMA MP190/MP210/MP220	Z Canon PG-40/CL-41	[PG-37/CL-38]
Canon PIXMA MP230/MP240/MP250/MP260/MP270/MP280/MP282	Z Canon PG-510/CL-511	[PG-512/CL-513]
Canon PIXMA MP450/MP460	Z Canon PG-40/50,CL-41/51	
Canon PIXMA MP470	Z Canon PG-40/CL-41	[PG-37/CL-38]
Canon PIXMA MP480/MP490/MP495/MP499	Z Canon PG-510/CL-511	[PG-512/CL-513]
Canon PIXMA MP500/MP510/MP520/MP530	Z Canon PGI-5/CLI-8	Mark II vain CLI-8
Canon PIXMA MP540/MP550/MP560/MP620/MP630/MP640	Z Canon PGI-520/CLI-521	
Canon PIXMA MP600/MP610/MP810	Z Canon PGI-5/CLI-8	
Canon PIXMA MP750/MP760/MP780	Z Canon BCI-6	
Canon PIXMA MP800/MP830	Z Canon PGI-5/CLI-8	
Canon PIXMA MP970	Z Canon PGI-5/CLI-8	
Canon PIXMA MP980/MP990	Z Canon PGI-520/CLI-521	
Canon PIXMA MX300/MX310	Z Canon PG-40/50,CL-41/51	[PG-37/CL-38]
Canon PIXMA MX320/MX330/MX340/MX350/MX360	Z Canon PG-510/CL-511	[PG-512/CL-513]
Canon PIXMA MX375/MX395/MX435/MX455/MX475/MX515/MX525/MX535	Z Canon PG-540/CL-541	
Canon PIXMA MX410/MX420	Z Canon PG-510/CL-511	[PG-512/CL-513]
Canon PIXMA MX474/MX534	Z [Canon PG-440/CL-441]	
Canon PIXMA MX494	Z [Canon PG-445/CL-446]	
Canon PIXMA MX495	Z [Canon PG-545/CL-546]	
Canon PIXMA MX700	Z Canon PGI-5/CLI-8	
Canon PIXMA MX715/MX885/MX895	Z Canon PGI-525/CLI-526	
Canon PIXMA MX725/MX925	Z Canon PGI-550/CLI-551	
Canon PIXMA MX7600	Z [Canon PGI-7/PGI-9]	
Canon PIXMA MX850	Z Canon PGI-5/CLI-8	
Canon PIXMA MX860/MX870	Z Canon PGI-520/CLI-521	
Canon PIXMA PRO-1	Z [Canon PGI-29]	
Canon PIXMA PRO-10/10S	Z [Canon PGI-72]	
Canon PIXMA PRO-100/100S	Z [Canon CLI-42]	
Canon PIXMA Pro 9000	Z Canon PGI-5/CLI-8	Mark II vain CLI-8
Canon PIXMA Pro 9500/Mark II	Z [Canon PGI-9]	
Canon S100	Z Canon BC-20	
Canon S200/S200x	Z Canon BCI-24 #	
Canon S300/S330	Z Canon BCI-24 #	
Canon S400/S450/S4500	Z Canon BC-30e	
Canon S500/S520/S530D/S630/S750/S6300	Z Canon BCI-3eBK	
Canon S600	Z Canon BC-30e	
Canon S800/S820/S820D/S830D	Z Canon BCI-6	
Canon S900/S9000	Z Canon BCI-6	
Canon SELPHY 1000	Z Canon KP-36IP	
Canon SELPHY CP400/CP500/CP510/CP600	Z Canon KP-36IP	
Canon SELPHY CP710/CP720/CP730/CP740/CP750/CP760/CP770/CP780	Z Canon KP-36IP	
Canon SELPHY CP790/CP800/CP810/CP820/CP900/CP910	Z Canon KP-36IP	
Canon SELPHY DS700/DS810	Z Canon BCI-16 #	
Canon SELPHY ES1/ES2/ES3/ES20/ES30/ES40		värirolla/paperi

HAKUOPAS TULOSTIMIIN

Canon W2200 Proof Printer	Z [Canon BC-1300/BCI-1302]	
Canon W6200 P	Z [Canon BC-1450/BCI-1431]	
Canon W6400	Z [Canon BC-1350/BCI-1431]	
Canon W7200/W8200 D	Z [Canon BC-1400/BCI-1411]	
Canon W7250	Z [Canon BC-1400/BCI-1401]	
Canon W8200 P	Z [Canon BC-1450/BCI-1421]	
Canon W8400	Z [Canon BC-1350/BCI-1421]	
Casio LCS-A,130	L Qume CrystalPrint #	
Citizen Overture 6	L Sharp JX-95TC #	
Citizen Overture 106	L Sharp JX-93TC #	
Citizen ProJet II	Z Olivetti FPJ 20 #	
Citizen Prolaser 12	L Xerox 4030 #	
Citizen Prolaser 6000	L Epson EPL-5000 #	
Compaq A1000/A1500,IJ1200/IJ1400P	Z Lexmark 70/12AX970E #	
Compaq Laser Printer LN32/LNM40	L	
Compaq Pagemarq 15/20	L Xerox 4215 #	
Datageneral 6454	L Canon EP-S #	
Datageneral 6474/6475/6476/6477/6480	L Dataprod. LZR-1200 #	
Datageneral 6640/6646	L Sharp JX-95TC	
Dataproducs DDS 24	L HP LaserJet 5Si #	
Dataproducs LZR-1200/1230/1260	L Dataprod. LZR-1200 #	
Dataproducs LZR-1555/1560/1580/2060/2080	L Xerox 4215 #	
Dataproducs LZR-1650	L Mita LP2080 #	
Dataproducs LZR-650/950/960	L Sharp JX-95TC	
DEC Colorwriter LSR 2000/2000Plus	L Lexmark Optra C #	
DEClaser 1000/1100/1152(LN 4/07)	L Canon EP-L #	
DEClaser 1800	L Epson EPL-5000 #	
DEClaser 2000/2100/2200 (LN 05/06)	L Canon EP-S #	
DEClaser 3000/3200/3250(LN 08)	L DEClaser 3000 #	
DEClaser 3500	L Apple #	
DEClaser 5000/5100(LN 09)	L HP 92298A #	
DEClaser LN 15	L QMS 1400 #	
DEClaser LN 17/LN 17PS	L Xerox 4517 #	
DEClaser LNC02	L	
DEC LCS 15 (LN 03)	L Ricoh Tonerkit 80 #	
DEC Multijet 1000/2000	Z HP 51626AE N:o 26 #	
DEC Multijet 1500	Z Olivetti FPJ 20 #	
DEC PrintServer 17,17/600,LPS 17	L HP LaserJet IIISi #	
DECWriter 110i/500i/520i	Z Olivetti FPJ 20 #	
Dell 1100/1110	L Dell 1100/OJ9833 #	
Dell 1130n/1133/1135n	L Dell 1130/2MMJP	Katun
Dell 1600/1600n	L [310-5416/7]	
Dell 1700/1710	L Dell 1700/K3756	
Dell 1815	L [Dell 1815 593-10153]	
Dell 2230d	L Dell 2230d/M797K	
Dell 2330d/dn,2350d/dn	L Dell 2330/PK941	
Dell 3000cn/3100cn	L	
Dell 5100cn	L	
Dell 922	Z [310-5372/5375]	
Dell All-in-One A920	Z [310-4142/43]Lex 16&26?	
Dell All-in-One A940	Z [310-3540/41]Lex 82&83?	
Dell All-in-One A960	Z [310-4631/33]Lex 82&83?	
Dell C3760n/dn,C3675dnf	L Dell C3670n/KT6FG	
Dell Inkjet J740	Z [310-4152/53/54]L70&20?	
Dell Laser M5200/5200n	L [310-4133]Lex T630?	
Dell Laser P1500	L [310-3543]Lex E220?	
Dell Laser S2500/2500n	L [310-3547]Lex T420?	
Dell Laser W5300/5300n	L [310-4549/4585]	
Doro Multilaser 40 Fax	F Doro Multilaser 40 #	
Doro PPF Gamma Fax	Z HP 51626AE N:o 26 #	
Epson ActionLaser 1000/1500	L Epson C13S051011 #	
Epson AcuLaser 2600/C2600	L Epson C13S050229 #	
Epson AcuLaser C1000/C2000	L Epson C13S050033 #	
Epson AcuLaser C1100/CX11N	L Epson C13S050190 #	
Epson AcuLaser C1600/CX16	L [Epson C1600]	
Epson AcuLaser C1700/C1750/CX17	L Epson C13S050614	
Epson AcuLaser C2800	L [Epson C2800]	
Epson AcuLaser C2900/CX29	L [Epson C2900]	
Epson AcuLaser C3000	L Epson C13S050213 #	
Epson AcuLaser C3800	L [Epson C3800]	

HAKUOPAS TULOSTIMIIN

Epson AcuLaser C3900/CX37	L [Epson C3900]	
Epson AcuLaser C4000	L Epson C13S050091 #	
Epson AcuLaser C4100	L Epson C13S050149 #	
Epson AcuLaser C4200	L Epson C13S050245 #	
Epson AcuLaser C8500/C8600	L Epson C13S050038 #	
Epson AcuLaser C900/C900N,C1900/D/PS	L Epson C13S050100	
Epson AcuLaser C9100	L Epson C13S050198 #	
Epson AcuLaser C9200	L [Epson C9200]	
Epson AcuLaser C9300	L [Epson C9300]	
Epson AcuLaser CX21	L [Epson CX21]	
Epson AcuLaser CX28	L [Epson CX28]	
Epson AcuLaser M1200	L Epson C13S050522	
Epson AcuLaser M1400/MX14	L Epson C13S050651	
Epson AcuLaser M2000	L Epson C13S050437	
Epson AcuLaser M2300/M2400/MX20	L Epson C13S050585	
Epson AcuLaser M4000	L [Epson M4000]	
Epson AcuLaser M7000	L [Epson M7000]	
Epson AcuLaser M8000	L [Epson M8000]	
Epson B-300/B-310N/B-500DN/B-510DN	Z [Epson C13T616100]	
Epson EcoTank ET-14000/ET-2500/ET-2550/ET_4500/ET-4550	Z [Epson C13T664140]	
Epson EcoTank L355/L555	Z [Epson C13T664140]	
Epson EPL-3000	L Epson EPL-3000 #	
Epson EPL-4100/4300	L Epson EPL-4100 #	
Epson EPL-5000/5200	L Epson C13S051011 #	
Epson EPL-5500/5500W	L Minolta PagePro 6 #	
Epson EPL-5600,EPL-N1200/EN/PS	L Minolta PagePro 12 #	
Epson EPL-5700/i/5700L,EPL-N5700	L Epson C13S050010 #	
Epson EPL-5800/L/N/PS	L Epson C13S050010 #	
Epson EPL-5900/5900L/6100/6100L	L Epson C13S050087 #	
Epson EPL-6000>Actionlaser Plus	L TEC 1305/MT904 #	
Epson EPL-6200	L Epson C13S050166 #	myös C13S050167
Epson EPL-6200L	L Epson C13S050167 #	
Epson EPL-7000/7100/7500/8000/8100	L Epson EPL-7100 #	
Epson EPL-C8000/C8200PS	L Epson C13S050019 #	
Epson EPL-N1600/E/ENT	L Epson C13S051056 #	
Epson EPL-N2000/N2000C/PS	L Epson EPL-N2000 #	
Epson EPL-N2050/PS/T	L Epson C13S051070 #	
Epson EPL-N2550	L [C13S050290]	
Epson EPL-N2700/N2700T/N2750/DT/PS	L Epson C13S051068 #	
Epson EPL-N3000/DT/T	L Epson C13S051111 #	
Epson EPL-N4000/T/FNT	L Epson C13S051060 #	
Epson EPL-N7000/DT/T	L Epson C13S051100 #	
Epson Expression Home XP-102/XP-202/XP-205/XP-212/XP-215/XP-225	Z Epson C13T18114010	
Epson Expression Home XP-30X	Z Epson C13T18114010	
Epson Expression Home XP-302/XP-305/XP-312/XP-315/XP-322/XP-325	Z Epson C13T18114010	
Epson Expression Home XP-402/XP-405/XP-412/XP-415/XP-422/XP-425	Z Epson C13T18114010	
Epson Expression Photo XP-55/XP-750/XP-760/XP-850/XP-860	Z Epson C13T24314010	
Epson Expression Photo XP-950/XP-960	Z Epson C13T24314010	
Epson Expression Premium XP-510/XP-520	Z Epson C13T26014010	
Epson Expression Premium XP-530/XP-630/XP-635/XP-830	Z Epson C13T33514010	
Epson Expression Premium XP-600/XP-605/XP-610/XP-615/XP-620/XP-625	Z Epson C13T26014010	
Epson Expression Premium XP-700/XP-710/XP-720/XP-800/XP-810/XP-820	Z Epson C13T26014010	
Epson SQ-850,2550/TSQ-4800	Z Epson C13S020002 #	
Epson Stylus 200/Color 200	Z Epson C13S020047 #	
Epson Stylus 400/800/800+/1000	Z Epson C13S020025 #	
Epson Stylus 820/Color II/III	Z Epson C13S020047 #	
Epson Stylus B1100	Z [Epson C13T0024010]	
Epson Stylus B40W	Z Epson C13T07114011 #	
Epson Stylus B42	Z Epson C13T12914010	
Epson Stylus BX300/BX310/BX600/BX610	Z Epson C13T07114011 #	
Epson Stylus BX305/BX320/BX525/BX625/BX635/BX925/BX935	Z Epson C13T12914010	
Epson Stylus C20/C40/C40 Plus/C40S	Z Epson C13T01340110 #	
Epson Stylus C20SX/C20UX/C40SX/UX	Z Epson C13T01340110 #	
Epson Stylus C42/C42S/C42SX/C42UX/C44UX/C46	Z Epson C13T03614010 #	
Epson Stylus C48	Z [Epson C13T06614010]	
Epson Stylus C62/CX3200	Z Epson C13T04014010 #	
Epson Stylus C64/C66/C84/C86	Z Epson C13T04414010 #	
Epson Stylus C84/C86	Z Epson C13T04314010 HC #	
Epson Stylus Color 300	Z Epson C13S020138 #	
Epson Stylus Color 400/500/600/600Q	Z Epson C13T05014010 #	

HAKUOPAS TULOSTIMIIN

Epson Stylus Color 440/460/640/660/670	Z Epson C13T05014010 #	
Epson Stylus Color 480/480SXU/580	Z Epson C13T01340110 #	
Epson Stylus Color 680	Z Epson C13T017401 #	
Epson Stylus Color 740/740i/760/860/1160	Z Epson C13T05114010 #	
Epson Stylus Color 800/850/1520	Z Epson C13T05114010 #	
Epson Stylus Color 880	Z Epson C13T019401 #	
Epson Stylus Color/Pro/Pro XL/Pro XL+	Z Epson C13S020034 #	
Epson Stylus CX3650/CX6400/CX6600	Z Epson C13T04314010 HC #	
Epson Stylus CX3650/CX6400/CX6600	Z Epson C13T04414010 #	
Epson Stylus D120	Z Epson C13T07114011 #	
Epson Stylus D68/D88	Z Epson C13T06114010	
Epson Stylus D78/D92	Z Epson C13T07114011 #	
Epson Stylus DX3800/DX3850/DX4250/DX4800/DX4850	Z Epson C13T06114010	
Epson Stylus DX4000/DX4050/DX5000/DX505C	Z Epson C13T07114011 #	
Epson Stylus DX4400	Z Epson C13T07114011 #	
Epson Stylus DX6000/DX6050/DX7000	Z Epson C13T07114011 #	
Epson Stylus DX7400	Z Epson C13T07114011 #	
Epson Stylus DX8400	Z Epson C13T07114011 #	
Epson Stylus DX9400	Z Epson C13T07114011 #	
Epson Stylus Photo/Photo 700/Photo EX	Z Epson C13T05014010 #	
Epson Stylus Photo 1400/1500	Z [Epson C13T07914010]	
Epson Stylus Photo 750/Photo 1200	Z Epson C13T05014010 #	
Epson Stylus Photo 790/870/875DC/890	Z Epson C13T00740110 #	
Epson Stylus Photo 810/830/925/935	Z Epson C13T02640110 #	
Epson Stylus Photo 895/915/1270/1290	Z Epson C13T00740110 #	
Epson Stylus Photo P50	Z Epson C13T08014011	
Epson Stylus Photo PX650/PX660/PX700/PX710/PX720/PX730	Z Epson C13T08014011	
Epson Stylus Photo PX800/PX810/PX820/PX830/PX935	Z Epson C13T08014011	
Epson Stylus Photo R1900	Z [Epson C13T08714010]	
Epson Stylus Photo R200/R220/R300/R320/R340	Z Epson C13T04814010 #	
Epson Stylus Photo R2000/R2400	Z [Epson C13T05914010]	
Epson Stylus Photo R240/R245	Z Epson C13T05514010	
Epson Stylus Photo R2880	Z [Epson C13T09694010]	
Epson Stylus Photo R265/R285/R360	Z Epson C13T08014011	
Epson Stylus Photo R3000	Z [Epson C13T15714010]	
Epson Stylus Photo R800/R1800	Z [Epson C13T05414010]	
Epson Stylus Photo RX420/RX425/RX520	Z Epson C13T05514010	
Epson Stylus Photo RX500/RX600/RX620/RX640	Z Epson C13T04814010 #	
Epson Stylus Photo RX560/RX585/RX685	Z Epson C13T08014011	
Epson Stylus Photo RX700	Z [Epson C13T55914010]	
Epson Stylus Pro 3800/3880	Z [Epson C13T580800]	
Epson Stylus Pro 4800/4880	Z [Epson C13T613xxx/614/605/606]	
Epson Stylus Pro GS6000	Z [Epson C13T624100]	
Epson Stylus S20/S21/SX105/SX115	Z Epson C13T07114011 #	
Epson Stylus S22/SX125/SX130	Z [Epson C13T12814010]	
Epson Stylus Scan 2000/Scan 2500	Z Epson C13T05114010 #	
Epson Stylus SX100/SX110/SX200/SX205/SX210/SX215/SX218/SX230	Z Epson C13T07114011 #	
Epson Stylus SX235/SX420/SX425/SX430/SX435/SX440/SX525/SX620	Z Epson C13T12914010	
Epson Stylus SX400/SX405/SX410/SX415/SX510/SX515/SX535/SX600/610	Z Epson C13T07114011 #	
Epson SureColor SC-F6000/F6200/F7000/F7100/F7200/F9200	Z [Epson C13T741100]	
Epson SureColor SC-P400	Z [Epson C13T32414010/C13T32484010]	
Epson SureColor SC-P600	Z [Epson C13T76014010]	
Epson WorkForce AL-C300	L [Epson AL-C300 Bk/C/M/Y]	
Epson WorkForce AL-C500	L [Epson AL-C500 Bk/C/M/Y]	
Epson WorkForce AL-M200/AL-MX200	L Epson C13S050709	
Epson WorkForce AL-M300/AL-MX300	L Epson C13S050691	
Epson WorkForce AL-M400	L Epson AL-M400	
Epson WorkForce AL-M8100	L [Epson C13S050762]	
Epson WorkForce Pro WF-5110/WF-5190/WF-5620/WF-5690	Z Epson C13T79014010	
Epson WorkForce Pro WF-6090/WF-6590	Z [Epson C13T907140/C13T908140]	
Epson WorkForce Pro WF-8010/WF-8090/WF-8510/WF-8590	Z [Epson C13T755140/C13T756140]	
Epson WorkForce Pro WF-M5190/WF-M5690	Z [Epson C13T865140/C13T866140]	
Epson WorkForce Pro WF-R5190/WF-R5690	Z [Epson C13T838140/C13T878140]	
Epson WorkForce Pro WF-R8590	Z [Epson C13T839140/C13T869140]	
Epson WorkForce Pro WP-4015/4025/4095	Z Epson C13T70214010/T703../T704..	
Epson WorkForce Pro WP-4515/4525/4535/4545/4595	Z Epson C13T70214010/T703../T704..	
Epson WorkForce WF-100	Z [Epson C13T26614010/C13T26704010]	
Epson WorkForce WF-2010/WF-2510/WF-2520/WF-2530/WF-2540	L Epson C13T16214010	
Epson WorkForce WF-2630/WF-2650/WF-2660	L Epson C13T16214010	
Epson WorkForce WF-3010/WF-3520/WF-3530/WF-3540	Z Epson C13T12914010	

HAKUOPAS TULOSTIMIIN

Epson WorkForce WF-3620/WF-3640	Z Epson C13T27114010	
Epson WorkForce WF-4630/WF-4640	Z Epson C13T79014010	
Epson WorkForce WF-7015/WF-7515/WF-7525	Z Epson C13T12914010	
Epson WorkForce WF-7110/WF-7610/WF-7620	Z Epson C13T27114010	
Esselte T4/T6/T8C	L TEC 1305/MT904 #	
Facit 7000/7010/7080/7150	L Ricoh Tonerkit 80 #	
Facit 8000/8010/P8100/8103	L IBM 4019 #	
Facit P5160/P7160/P7165/P8160	L Sharp JX-97TC #	
Facit P6010/6006	L Ricoh PC 6000 #	
Facit P6060/P8040/8045/P8085	L TEC 1305/MT904 #	
Facit P8020	Z Seikosha SpeedJet 300 #	
Facit P8042/P8042 Win	L Mannesmann T9104w #	
Facit P8086	L Mannesmann T9008 #	
Fujitsu PrintPartner 10/10V/12V/16DV/16ADV	L Fujitsu PrintPartner #	
Fujitsu PrintPartner 14/14V/14AV/14ADV/20W	L Fujitsu PrintPartner #	
Fujitsu PrintPartner 4000/8000/8600	L Fujitsu VM4 #	
Fujitsu RX7100	L Fujitsu #	
Fujitsu VM4/VM8/VM4win	L Fujitsu VM4 #	
Fujitsu VM600/600e	L Epson EPL-5000 #	
GCC General Comp Corp BLP II	L OKI OL400 #	
Genicom 7924S Plus	L Lexmark Optra S #	
Gestetner C7010	L Ricoh 110 #	
Gestetner C7116/C7116dn	L Ricoh 125	
Gestetner DSc38/DSc38u/DSc38u+	L Ricoh 205/105 #	
Gestetner P7014/P7016	L Ricoh 1400 #	
Gestetner P7020/P7021	L Ricoh 2000 #	
Gestetner P7026/7126/P7132	L Ricoh 215	
Gestetner P7027/P7032		see Gestetner copiers
Gestetner P7045		see Gestetner copiers
Gestetner P7145		see Gestetner copiers
HP 2000c	Z HP C4844AE N:o 10	
HP 2500c Pro	Z HP C4844AE N:o 10	
HP 2684A	L HP LaserJet 2000 #	
HP 9085mfp	L [HP Q5702C]	Konica 7085?
HP Business InkJet 1100/1200	Z HP C4844AE N:o 10 #	
HP Business InkJet 2200/2230/2250/2280	Z HP C4844AE N:o 10 #	
HP Business InkJet 2300/2500/2600/2800	Z HP C4844AE N:o 10 #	
HP Business InkJet 2700/3000	Z HP C4844AE N:o 10 #	
HP Color 9850mfp	L [HP Q5920C/21C/22C/23C]	
HP Color Copier 140/145/150/155	Z HP 51645AE N:o 45	
HP Color LaserJet/5/5M	L HP Color LaserJet #	
HP Color LaserJet 1500/1500L	L HP Color LaserJet 2500	
HP Color LaserJet 1600/2600/2605	L HP Color LaserJet 1600	
HP Color LaserJet 2500/L/n/tn	L HP Color LaserJet 2500	
HP Color LaserJet 2550/L/Ln/n	L HP Color LaserJet 2550 #	
HP Color LaserJet 2700/3000	L [HP Q7560A/61A/62A/63A]	
HP Color LaserJet 2820/2840	L HP Color LaserJet 2550 #	
HP Color LaserJet 3500/n/3550/n	L HP Color LaserJet 3500 #	
HP Color LaserJet 3600	L HP Color LaserJet 3600	
HP Color LaserJet 3700/n/dn/dtn	L HP Color LaserJet 3700 #	
HP Color LaserJet 3800	L HP Color LaserJet 3800 #	
HP Color LaserJet 4500/4550	L HP Color LaserJet 4500 #	
HP Color LaserJet 4600/4610/4650	L HP Color LaserJet 4600	
HP Color LaserJet 4700	L HP Q5950A/51A/52A/53A #	
HP Color LaserJet 500 M551/M570/M575	L HP 507A/X Bk/C/M/Y	
HP Color LaserJet 5500/5550	L [HP C9730A/31A/32A/33A]	
HP Color LaserJet 700 M775	L HP 651A Bk/C/M/Y	
HP Color LaserJet 8500/8550	L HP Color LaserJet 8500 #	
HP Color LaserJet 9500/9550	L [HP C8550A/51A/52A/53A]	
HP Color LaserJet CM1015/CM1017	L HP Color LaserJet 1600	
HP Color LaserJet CM1312	L HP Color LaserJet CM1312	
HP Color LaserJet CM2320	L HP CC530A/31A/32A/33A	
HP Color LaserJet CM3525/CM3530/CP3525/CP3530	L HP CE250A/CE250X/51A/52A/53A	
HP Color LaserJet CM4540	L HP CE260A	[CF031A/32A/33A]
HP Color LaserJet CM4730	L [HP Q6460A/61A/62A/63A]	
HP Color LaserJet CM6030/CM6040	L [HP CB390A/CB381A/82A/83A]	
HP Color LaserJet CM8050/CM8060	L [HP C8750A/51A/52A/53A]	
HP Color LaserJet CP1215/CP1217/CP1515/CP1518	L HP Color LaserJet CM1312	
HP Color LaserJet CP2025	L HP CC530A/31A/32A/33A	
HP Color LaserJet CP3505	L HP Color LaserJet 3800 #	

HAKUOPAS TULOSTIMIIN

HP Color LaserJet CP4005	L [HP CB400A/01A/02A/03A]	
HP Color LaserJet CP4025/CP4525	L HP CE260A/61A/62A/63A	
HP Color LaserJet CP5225	L [HP CE740A/CE41A/42A/43A]	
HP Color LaserJet CP5525	L [HP CE270A/71A/72A/73A]	
HP Color LaserJet CP6015	L [HP CB380A/CB381A/82A/83A]	
HP Color LaserJet M552/M553/M577	L HP CF360/61/62/63A/X	508A/X
HP Color LaserJet M651/M680	L [HP CF320A/21A/22A/23A]	
HP Color LaserJet M750	L [HP CE270A/71A/72A/73A]	
HP Color LaserJet M855	L [HP CF310A/11A/12A/13A]	[826A]
HP Color LaserJet M880	L [HP CF300A/01A/02A/03A]	
HP Color LaserJet Pro 100/200 M175/M275	L HP 126A Bk/C/M/Y	
HP Color LaserJet Pro 200 M251/M276	L HP 131A/X Bk/C/M/Y	
HP Color LaserJet Pro 300 M351/M375	L HP 305X/305A Bk/C/M/Y	
HP Color LaserJet Pro 400 M451/M475	L HP 305X/305A Bk/C/M/Y	
HP Color LaserJet Pro CM1415	L HP 128A Bk/C/M/Y	
HP Color LaserJet Pro CP1025	L HP 126A Bk/C/M/Y	
HP Color LaserJet Pro CP1525	L HP 128A Bk/C/M/Y	
HP Color LaserJet Pro M176/M177	L HP 130A Bk/C/M/Y	CF350A
HP Color LaserJet Pro M252/M274/M277	L HP 201X	CF400X/01X/02X/03X
HP Color LaserJet Pro M377/M452/M477	L HP 410X Bk/C/M/Y	[CF410A]
HP Color LaserJet Pro M476	L HP 312X/A	CF380X/81A/82A/83A
HP Color Printer 1160	Z HP C5011DE N:o 14 #	
HP CopyJet/M	Z HP 51640A #	
HP CP1700	Z HP C4844AE N:o 10 #	
HP DesignJet 130/90	Z [HP N:o 84/N:o 85]	
HP DesignJet 1050c/1055cm	Z [HP N:o 80]	
HP DesignJet 200/220/600	Z HP 51626AE N:o 26 #	
HP DesignJet 230/250C/330/350C/430/450C/455CA/650C	Z HP 51640A #	
HP DesignJet 4520	Z [HP N:o 90]	
HP DesignJet 510	Z [HP N:o 82]	
HP DesignJet 70/110plus/500/800/815mfp	Z HP C4844AE N:o 10 #	
HP DesignJet 750c/755cm	Z HP 51645AE N:o 45	
HP DesignJet T610/T620/T770/T1120/T1200	Z [HP N:o 72]	
HP DesignJet Z2100/Z3100	Z [HP N:o 70]	
HP DesignJet Z6100	Z [HP N:o 91]	
HP DeskJet 1000/1010/1050/1510	Z HP CH561EE/CH562EE	N:o 301
HP DeskJet 1200C,1200C/PS	Z HP 51640A #	
HP DeskJet 1220c/1280/1600c/1600cn	Z HP 51645AE N:o 45	
HP DeskJet 2050/2510/2540/2549	Z HP CH561EE/CH562EE	N:o 301
HP DeskJet 3000/3050/3050A/3055A	Z HP CH561EE/CH562EE	N:o 301
HP DeskJet 3070A/3520	Z HP CB316EE/18EE/19EE/20EE	N:o 364
HP DeskJet 310/320/340/340cbi/Portable	Z HP 51633ME N:o 33 #	
HP DeskJet 3320/3325/3350/3420/3425	Z HP C8727AE N:o 27 #	
HP DeskJet 3520/3535/3550/3650/3745	Z HP C8727AE N:o 27 #	
HP DeskJet 3820	Z HP C6615DE N:o 15 #	
HP DeskJet 3920/3940	Z HP C9351AE N:o 21	
HP DeskJet 450ci/450cbi	Z HP C6656AE N:o 56	
HP DeskJet 460	Z HP C8765EE N:o 338	
HP DeskJet 510/520/540/550c/560c	Z HP 51626AE N:o 26 #	
HP DeskJet 5150/5550/5652/5850	Z HP C6656AE N:o 56	
HP DeskJet 5440	Z HP C9362EE N:o 336 #	
HP DeskJet 5740	Z HP C8765EE N:o 338	
HP DeskJet 5740/5940	Z HP C8767EE N:o 339	
HP DeskJet 5940/6940/6980	Z HP C9364EE N:o 337	
HP DeskJet 610c/612c/615c/640c/656c	Z HP C6614DE N:o 20 #	
HP DeskJet 6122/6127	Z HP 51645AE N:o 45	
HP DeskJet 6540	Z HP C8765EE N:o 338	
HP DeskJet 6540/6840/6940/6980	Z HP C8767EE N:o 339	
HP DeskJet 690c/693c/694c/695c/697c	Z HP 51629AE N:o 29 #	
HP DeskJet 710c/720c/815c/820cxi/850c	Z HP 51645AE N:o 45	
HP DeskJet 810c/816c/825c/840c/843c/845c	Z HP C6615DE N:o 15 #	
HP DeskJet 870cxi/880c/890c/890cxi/895cxi	Z HP 51645AE N:o 45	
HP DeskJet 916c/920c/940c	Z HP C6615DE N:o 15 #	
HP DeskJet 930c/950c/959c/970cxi/980cxi	Z HP 51645AE N:o 45	
HP DeskJet 9300	Z HP 51645AE N:o 45	
HP DeskJet 960c/990c/995c	Z HP 51645AE N:o 45	
HP DeskJet 9600/9650/9670/9680	Z HP C6656AE N:o 56	
HP DeskJet 9800	Z HP C8765EE N:o 338	
HP DeskJet 9800	Z HP C8767EE N:o 339	
HP DeskJet 990cxi/1100c/1120c/1125c	Z HP 51645AE N:o 45	

HAKUOPAS TULOSTIMIIN

HP DeskJet D1420/D1430/D1445/D1455/D1460/D1468/D1470	Z HP C9351AE N:o 21	
HP DeskJet D1560	Z HP C9351AE N:o 21	
HP DeskJet D2360	Z HP C9351AE N:o 21	
HP DeskJet D2560/D2660	Z HP CC640EE/CC643EE	
HP DeskJet D4260/D4360	Z HP CB335EE N:o 350	
HP DeskJet D5560	Z HP CC640EE/CC643EE	
HP DeskJet/DeskWriter 600/c/660c/670c	Z HP 51629AE N:o 29 #	
HP DeskJet F2120/F2128/F2140/F2180/F2187/F2188	Z HP C9351AE N:o 21	
HP DeskJet F2224	Z HP C9351AE N:o 21	
HP DeskJet F2480	Z HP CC640EE/CC643EE	
HP DeskJet F370/F380	Z HP C9351AE N:o 21	
HP DeskJet F4180	Z HP C9351AE N:o 21	
HP DeskJet F4224/F4280/F4580	Z HP CC640EE/CC643EE	
HP DeskJet/Plus/400/420c/500/500c	Z HP 51626AE N:o 26 #	
HP DeskWriter 310/320	Z HP 51633ME N:o 33 #	
HP DeskWriter c/500/510/520/540/550c/560c	Z HP 51626AE N:o 26 #	
HP ENVY 110/120	Z HP CC640EE/CC643EE	N:o 300
HP ENVY 4500/5530	Z HP CH561EE/CH562EE	N:o 301
HP ENVY 5640/7640	Z HP C2P05AE/C2P07AE	N:o 62XL
HP Fax 1220	Z HP 51645AE N:o 45	
HP LaserJet 1000/1000w/1005w	L HP C7115X	
HP LaserJet 1010/w,1012/w,1015,1018,1020,1022	L HP Q2612A	
HP LaserJet 1100/1100A	L HP C4092A	
HP LaserJet 1150	L HP Q2624A #	
HP LaserJet 1160	L HP Q5949A	
HP LaserJet 1200/n/se,1220/n/se	L HP C7115X	
HP LaserJet 1300/n	L HP Q2613A/X	
HP LaserJet 1320/n/nw/tn	L HP Q5949A/X	
HP LaserJet 2100/2200	L HP C4096A	
HP LaserJet 2300/d/dn/dtn/L/n	L HP Q2610A #	
HP LaserJet 2410/2420/2430	L HP Q6511A/X #	
HP LaserJet 3015/3020/3030/3050/3052/3055	L HP Q2612A	
HP LaserJet 3100/3150	L HP C3906A #	
HP LaserJet 3200/m/se	L HP C4092A	
HP LaserJet 3300/3320/n/3330/mfp/3380	L HP C7115X	
HP LaserJet 3390/3392	L HP Q5949A	
HP LaserJet 4/4M/4Plus/4MP/plus	L HP 92298A #	
HP LaserJet 4000/4050	L HP C4127X	
HP LaserJet 4100/dtn/n/tn	L HP C8061X #	
HP LaserJet 4200	L HP Q1338A	
HP LaserJet 4250/4350	L HP Q5942A/X	
HP LaserJet 4300	L HP Q1339A	
HP LaserJet 4345mfp	L HP Q5945A	
HP LaserJet 4L/4ML/4P/4MP	L HP 92274A #	
HP LaserJet 4V/4MV	L HP C3900A #	
HP LaserJet 5/5M/5N	L HP 92298A #	
HP LaserJet 5000/5100	L HP C4129X	EP-62
HP LaserJet 5200	L [HP Q7516A]	
HP LaserJet 5L/5ML	L HP C3906A #	
HP LaserJet 5P/5MP	L HP C3903A #	
HP LaserJet 5Si/5Si MX/5Si NX	L HP LaserJet 5Si #	
HP LaserJet 6L	L HP C3906A #	
HP LaserJet 6P/6MP	L HP C3903A #	
HP LaserJet 600 M601	L HP 90A	
HP LaserJet 600 M602/M603	L HP 90A	HP 90X
HP LaserJet 700 M712/M725	L HP 14X	HP 14A
HP LaserJet 8000/DN/N,Mopier 240	L HP LaserJet 5Si #	
HP LaserJet 8100/8150,Mopier 320	L HP C4182X #	
HP LaserJet 9000/9040/9050/M9040/M9050	L [HP C8543X]	
HP LaserJet 9055/9065	L HP Q3682C #	
HP LaserJet II/IIID,III/IIID	L Canon EP-S #	
HP LaserJet IIP/IIP+/IIIP	L Canon EP-L #	
HP LaserJet IIISi/4Si/4Si MX	L HP LaserJet IIISi #	
HP LaserJet M1005/M1319	L HP Q2612A	Canon 703
HP LaserJet M1120/M1522	L HP CB436A	
HP LaserJet M2727	L HP Q7553X	
HP LaserJet M3027/M3035	L HP Q7551X	
HP LaserJet M4345	L HP Q5945A	
HP LaserJet M4555	L HP 90A/X	
HP LaserJet M500 M525	L HP CE255X	CE255A

HAKUOPAS TULOSTIMIIN

HP LaserJet M501/M506/M527	L HP 87X	CF287X
HP LaserJet M5025/M5035	L [HP Q7570A]	
HP LaserJet M604	L HP 81A	CF281A
HP LaserJet M605/M606/M630	L HP 81A/81X	CF281A/X
HP LaserJet M806/M830	L [HP 25X]	CF325X
HP LaserJet P1005/P1006	L HP CB435A	
HP LaserJet P1505	L HP CB436A	
HP LaserJet P2014/P2015	L HP Q7553X	
HP LaserJet P2035/P2055	L HP CE505A	CE505X vain P2055
HP LaserJet P3005	L HP Q7551X	
HP LaserJet P3015	L HP CE255X	CE255A
HP LaserJet P4014/P4015/P4510/P4515	L HP CC364A	CC364X ei P4014
HP LaserJet P4015/P4510/P4515	L HP CC364X	CC364A
HP LaserJet/Plus/500	L Canon EP #	
HP LaserJet Pro 400 M401/M425	L HP 80X	
HP LaserJet Pro M1132/M1212/M1214/M1217	L HP CE285A	
HP LaserJet Pro M125/M127/M201/M225	L HP 83A	CF283A
HP LaserJet Pro M1536	L HP CE278A	
HP LaserJet Pro M402/M426	L HP 26X	CF226X
HP LaserJet Pro M521	L HP CE255X	[CE255A]
HP LaserJet Pro P1102	L HP CE285A	
HP LaserJet Pro P1566/P1606	L HP CE278A	
HP OfficeJet 100	Z HP CC640EE/CC643EE	
HP OfficeJet 1110	Z HP C6656AE N:o 56	
HP OfficeJet 150	Z HP C8765EE N:o 338	
HP OfficeJet 200	Z HP C2P05AE/C2P07AE	N:o 62XL
HP OfficeJet 2620/4630	Z HP CH561EE/CH562EE	N:o 301
HP OfficeJet 350	Z HP 51626AE N:o 26 #	
HP OfficeJet 4110/4215/4255	Z HP C6656AE N:o 56	
HP OfficeJet 4215/4255/5610	Z HP C8727AE N:o 27	
HP OfficeJet 4500	Z [HP 901 HP CC653AE/CC656AE]	
HP OfficeJet 4620/4622	Z HP CB316EE/18EE/19EE/20EE	N:o 364
HP OfficeJet 500/590/625/635	Z HP 51629AE N:o 29 #	
HP OfficeJet 5110	Z HP C6615DE N:o 15 #	
HP OfficeJet 5510/5610/6110	Z HP C6656AE N:o 56	
HP OfficeJet 5740	Z HP C2P05AE/C2P07AE	N:o 62XL
HP OfficeJet 6000/6500/7000/7500	Z HP CD975AE/72AE/73AE/74AE	N:o 920XL
HP OfficeJet 6100/6600/6700/7100/7110/7510/7610/7612	Z HP CN053AE/54AE/55AE/56AE	N:o 932/933/XL
HP OfficeJet 6210/7210/7310/7410	Z HP C8765EE N:o 338	
HP OfficeJet 6310	Z HP C8767EE N:o 339	
HP OfficeJet 700/710/720/725	Z HP 51629AE N:o 29 #	
HP OfficeJet 7130/7140xi	Z HP C5011DE N:o 14 #	
HP OfficeJet 7210/7310/7410	Z HP C8767EE N:o 339	
HP OfficeJet 9110/9120/9130	Z HP C4844AE N:o 10 #	
HP OfficeJet Color X555/X585	Z [HP D8J10A/07A/08A/09A]	N:o 980
HP OfficeJet d125xi/d135/d145	Z HP C5011DE N:o 14 #	
HP OfficeJet d150xi/d155xi	Z HP C5011DE N:o 14 #	
HP OfficeJet G55/85/95	Z HP 51645AE N:o 45	
HP OfficeJet H470	Z HP C8765EE N:o 338	
HP OfficeJet J3680	Z HP C9351AE N:o 21	
HP OfficeJet J4580/J4680	Z [HP CC653AE/CC656AE]	
HP OfficeJet J5780/J5785/J6410/J6415/J6424	Z HP CB335EE N:o 350	
HP OfficeJet K60/60xi/80/80xi	Z HP 51645AE N:o 45	
HP OfficeJet Pro 1150c/1170c/1175c	Z HP 51645AE N:o 45	
HP OfficeJet Pro 251/276	Z HP CN045AE/46AE/47AE/48AE	N:o 950/951XL
HP OfficeJet Pro 6230/6830	Z [HP C2P19AE/P20AE...P25AE]	N:o 934/935/XL
HP OfficeJet Pro 8000/8500	Z HP C4906AE/07AE/08AE/09AE	N:o 940XL
HP OfficeJet Pro 8100/8600/Plus/8610/8615/8620	Z HP CN045AE/46AE/47AE/48AE	N:o 950/951XL
HP OfficeJet Pro K5400	Z HP C9396AE	N:o 88XL
HP OfficeJet Pro K550	Z HP C9396AE	N:o 88XL
HP OfficeJet Pro K850	Z [HP N:o 11]	
HP OfficeJet Pro K8600	Z HP C9396AE	N:o 88XL
HP OfficeJet Pro L7480/ L7580/L7590/L7680/L7780/L7880	Z HP C9396AE	N:o 88XL
HP OfficeJet Pro X451/X476/X551/X576	Z HP CN621AE/CN625AE	N:o 970/970XL
HP OfficeJet R40/45/60/65/80	Z HP 51645AE N:o 45	
HP OfficeJet T45/45xi/65/65xi	Z HP 51645AE N:o 45	
HP OfficeJet V40/45	Z HP C6615DE N:o 15 #	
HP PageWide Color 556/586	L [HP 981A/X]	
HP PaintJet/XL	Z HP 51606A #	
HP PaintWriter/XL	Z HP 51606A #	

HAKUOPAS TULOSTIMIIN

HP PhotoSmart 1000/1215/1218/P1000/P1100	Z HP 51645AE N:o 45	
HP PhotoSmart 1115/1315	Z HP 51645AE N:o 45	
HP PhotoSmart 130/145/230/245	Z HP C6657AE N:o 57	
HP PhotoSmart 2575	Z HP C8767EE N:o 339	
HP PhotoSmart 2575/2710	Z HP C8765EE N:o 338	
HP PhotoSmart 3110/3308/3210/3310/3313/3314	Z HP CB333EE N:o 363	
HP PhotoSmart 325/375	Z [HP C9368AE N:o 100]	
HP PhotoSmart 335/385	Z HP C8766EE N:o 343	
HP PhotoSmart 470/475	Z HP C8766EE N:o 343	
HP PhotoSmart 5510/5515/5520/5524	Z HP CB316EE/18EE/19EE/20EE	N:o 364
HP PhotoSmart 6510/6520	Z HP CB316EE/18EE/19EE/20EE	N:o 364
HP PhotoSmart 7150/7260/7350/7450/7550	Z HP C6656AE N:o 56	
HP PhotoSmart 7510/7520	Z HP CB316EE/18EE/19EE/20EE	N:o 364
HP PhotoSmart 7660/7760/7960	Z HP C6656AE N:o 56	
HP PhotoSmart 8050	Z HP C9364EE N:o 337	
HP PhotoSmart 8050/8150/8450/8750	Z HP C8767EE N:o 339	
HP PhotoSmart 8150/8450	Z HP C8765EE N:o 338	
HP PhotoSmart 8250	Z HP CB333EE N:o 363	
HP PhotoSmart A516	Z HP CB304AE N:o 110	
HP PhotoSmart A526/A532	Z HP CB304AE N:o 110	
HP PhotoSmart A612/A618/A636	Z HP CB304AE N:o 110	
HP PhotoSmart A717	Z HP CB304AE N:o 110	
HP PhotoSmart A826	Z HP CB304AE N:o 110	
HP PhotoSmart All-in-One B110	Z HP CB316EE/18EE/19EE/20EE	
HP PhotoSmart B8550	Z HP CB316EE/18EE/19EE/20EE	
HP PhotoSmart C3180	Z HP C8765EE N:o 338	
HP PhotoSmart C4180	Z HP C9364EE N:o 337	
HP PhotoSmart C4280/C5280	Z HP CB335EE N:o 350	
HP PhotoSmart C4340/C4380/C4382/C4383/C4384/C4385/C4388	Z HP CB335EE N:o 350	
HP PhotoSmart C4480/C4485/C4580/C4599/C5280	Z HP CB335EE N:o 350	
HP PhotoSmart C4680/C4780	Z HP CC640EE/CC643EE	
HP PhotoSmart C5180	Z HP CB333EE N:o 363	
HP PhotoSmart C5380/C6380	Z HP CB316EE/18EE/19EE/20EE	
HP PhotoSmart C6180/C6280/C6825	Z HP CB333EE N:o 363	
HP PhotoSmart C7180/C7280	Z HP CB333EE N:o 363	
HP PhotoSmart C8180	Z HP CB333EE N:o 363	
HP PhotoSmart CN216/CN503	Z HP CB316EE/18EE/19EE/20EE	Gigantti
HP PhotoSmart D5160	Z HP C8767EE N:o 339	
HP PhotoSmart D5360	Z HP CB335EE N:o 350	
HP PhotoSmart D5460	Z HP CB316EE/18EE/19EE/20EE	
HP PhotoSmart D6160/D7260/D7360/D7460	Z HP CB333EE N:o 363	
HP PhotoSmart Plus B209/B210	Z HP CB316EE/18EE/19EE/20EE	
HP PhotoSmart Premium 2011	Z HP CB316EE/18EE/19EE/20EE	
HP PhotoSmart Premium C309/C310/C410	Z HP CB316EE/18EE/19EE/20EE	
HP PhotoSmart Pro B8350/B8353	Z HP C8767EE N:o 339	
HP PhotoSmart Pro B8850/ B9180	Z HP C9412A N:o 38	
HP PSC 1210/1215/1315/1350	Z HP C6656AE N:o 56	
HP PSC 1410	Z HP C9351AE N:o 21	
HP PSC 1510	Z HP C8765EE N:o 338	
HP PSC 1610	Z HP C8765EE N:o 338	
HP PSC 2110/2170/2175/2210	Z HP C6656AE N:o 56	
HP PSC 2355	Z HP C8765EE N:o 338	
HP PSC 2400/2410/2500/2510	Z HP C6656AE N:o 56	
HP PSC 2610/2710	Z HP C8767EE N:o 339	
HP PSC 500/500xi/750/750xi	Z HP C6615DE N:o 15 #	
HP PSC 950/950vr/950xi	Z HP C6615DE N:o 15 #	
HP QuietJet/Plus	Z HP 51604A #	
HP ThinkJet	Z HP 51604A #	
IBM 3112/3116/4049	L Lexmark Optra #	
IBM 4019/4019E/4028/4029,WinWriter 600	L IBM 4019 #	
IBM 4039/4039 plus/3912/3916	L IBM 4039 #	
IBM 4039-10D/10R/10RD/12C/12L/12R/16L	L IBM 4039 #	
IBM 4070	Z Canon BC-02 #	
IBM 4072	Z Canon BJI-642 #	
IBM 4079	Z Canon BJI-643 #	
IBM 4216/5216	L Ricoh PC 6000 #	
IBM IJ4076,ExecJet II/IIc	Z Lexmark 13400HCE #	
IBM Infoprint 1116	L IBM Infoprint 1116 #	
IBM Infoprint 1120/1125	L IBM Infoprint 1120 #	
IBM Infoprint 1130/1140	L IBM Infoprint 1130 #	

HAKUOPAS TULOSTIMIIN

IBM Infoprint 1145	L IBM Infoprint 1145 #	
IBM Infoprint 12	L IBM Infoprint 12 #	
IBM Infoprint 1222	L [53P7705/53P7707]	
IBM Infoprint 1226	L [53P7582]	
IBM Infoprint 1312	L IBM Infoprint 1312 #	
IBM Infoprint 1332/1352/1372	L IBM Infoprint 1332 #	
IBM Infoprint 1410	L [75P5520/75P5522]	
IBM Infoprint 1412/1412n	L IBM Infoprint 1412 #	
IBM Infoprint 1422	L [75P6050/75P6052]	
IBM Infoprint 1512/1512n	L IBM Infoprint 1412 #	
IBM Infoprint 1532/1552/1570/1572/1650	L [IBM Infoprint 1532]	
IBM Infoprint 1540/1560/1580	L [IBM Infoprint 1540]	
IBM Infoprint 1570/1572/1650	L [IBM Infoprint 1570]	
IBM Infoprint 1585	L IBM Infoprint 1585 #	
IBM Infoprint 1601/1602/1612	L [IBM Infoprint 1601]	
IBM Infoprint 1622	L [IBM Infoprint 1622]	
IBM InfoPrint 20/4320	L IBM InfoPrint 20 #	
IBM Infoprint 2060ES/2075ES/2090/2105ES	L [10R2774]	
IBM Infoprint 2085/2105	L [57P1416]	
IBM Infoprint 21/21EN/21TR	L IBM Infoprint 21 #	
IBM InfoPrint 32/40	L IBM InfoPrint 32 #	
IBM Infoprint Color 1220	L	
IBM Infoprint Color 1228,1357	L IBM Infoprint Color 1228 #	
IBM Infoprint Color 1334	L [IBM Infoprint Color 1334]	
IBM Infoprint Color 1354/1454/1464	L [IBM Infoprint Color 1354]	
IBM Infoprint Color 1534/1614/1634	L [IBM Infoprint Color 1534]	
IBM Infoprint Color 1567	L [IBM Infoprint Color 1567]	
IBM Infoprint Color 1654/1664	L [IBM Infoprint Color 1654]	
IBM Infoprint Color 8	L	
IBM LP4037 5E	L IBM 4037 #	
IBM Network Color Printer/4303	L Lexmark Optra C #	
IBM Network Printer 12/4312	L IBM NP 12 #	
IBM Network Printer 17/4317	L Xerox 4517 #	
IBM Network Printer 24/4324	L HP LaserJet 5Si #	
IBM ValueWriter 300/600	L IBM 4037 #	
IBM WinWriter 100/150c	Z Lexmark 13400HCE #	
IBM WinWriter 400	L IBM 4037 #	
IMP Laser GW1	L Ricoh PC 6000 #	
JetFax M5/M910/M920/M930	F OKI OL400e	
Kodak Diconix 150/180/300/330	Z HP 51604A #	
Kodak PPM 100	Z Lexmark 70/12AX970E #	
Kodak PPM 120/200/201	Z	
Konica KL-3015 Color Vision	L Konica KL-3015 #	
Konica Minolta bizhub 20/20P	Konica TNP24	
Konica Minolta bizhub 40P	Konica TN412	
Konica Minolta bizhub C30P/C31P	[Konica C30P BK/C/M/Y]	
Konica Minolta bizhub C35/C35P	Konica TNP22K/C/M/Y	
Konica Minolta magicolor 1600W/1650EN/1680MF/1960MF	L Konica Minolta magicolor 1600	
Konica Minolta magicolor 2400W/2430DL	L Konica Minolta magicolor 2400	
Konica Minolta magicolor 2450/2480MF/2490MF	L Konica Minolta magicolor 2400	
Konica Minolta magicolor 2500W/2530DL/2550/2550DN/2590MF	L Konica Minolta magicolor 2400	
Konica Minolta magicolor 3300	L [Konica Minolta magicolor 3300]	
Konica Minolta magicolor 4650EN/DN,4690MF,4695MF	L [Konica Minolta magicolor 4650]	
Konica Minolta magicolor 5430/DL	L Konica Minolta magicolor 5340 #	
Konica Minolta magicolor 5440DL/5450	L [Konica Minolta magicolor 5440]	
Konica Minolta magicolor 5550/5570/5650/5670	L [Konica Minolta magicolor 5550]	
Konica Minolta magicolor 7300	L [Konica Minolta magicolor 7300]	
Konica Minolta magicolor 7450	L Konica Minolta magicolor 7450 #	
Konica Minolta magicolor 8650	L [Konica Minolta magicolor 8650]	
Konica Minolta PagePro 1300W/1350E/1350EN/1350W	L Konica Minolta PagePro 1300 #	
Konica Minolta PagePro 1380MF/1390MF	L Konica Minolta PagePro 1300 #	
Konica Minolta PagePro 1400W	L Konica Minolta PagePro 1400 #	
Konica Minolta PagePro 1480MF/1490MF	L Konica Minolta PagePro 1480	
Konica Minolta PagePro 4650	L [Konica Minolta PagePro 4650]	
Konica Minolta PagePro 5650	L [Konica Minolta PagePro 5650]	
Kyocera ECOSYS P2035	L Kyocera TK-160	
Kyocera ECOSYS P2135	L Kyocera TK-170	
Kyocera ECOSYS P6030	L Kyocera TK-560	
Kyocera ECOSYS P7035	L Kyocera TK-570	
Kyocera F-1000/1010/1200, P-2000/P-2002/2010	L Kyocera TK-4 #	

HAKUOPAS TULOSTIMIIN

Kyocera F-1800/3300/3000A	L Kyocera TK-7 #	
Kyocera F-2200/2200S	L Kyocera TK-3 #	
Kyocera F-3000/3010	L Kyocera TK-2 #	
Kyocera F-800/800A/800T/820, FS-850	L Kyocera TK-6 #	
Kyocera FS-1000/1000+/1010/N,1050/N	L Kyocera TK-17 #	
Kyocera FS-1016MFP/1116MFP	L Kyocera TK-110	
Kyocera FS-1018MFP/1020D/1118MFP	L Kyocera TK-18	
Kyocera FS-1028MFP/1128MFP	L Kyocera TK-130	
Kyocera FS-1030D/DN	L Kyocera TK-120	
Kyocera FS-1100	L Kyocera TK-140	
Kyocera FS-1120D/DN	L Kyocera TK-160	
Kyocera FS-1200	L Kyocera TK-25 #	
Kyocera FS-1300D/1350DN	L Kyocera TK-130	
Kyocera FS-1320D/DN,1370DN	L Kyocera TK-170	
Kyocera FS-1500/3500/1500A/3500A	L Kyocera TK-9 #	
Kyocera FS-1550/1550A/1550+/1600/1600A/1600+	L Kyocera TK-12 #	
Kyocera FS-1700/1700+/1750	L Kyocera TK-20H #	
Kyocera FS-1800/1800+/N,3800/N	L Kyocera TK-60 #	
Kyocera FS-1900/1900N	L Kyocera TK-50H #	
Kyocera FS-1920/1920N	L Kyocera TK-55 #	
Kyocera FS-2000D	L Kyocera TK-310	
Kyocera FS-2020D/DN	L Kyocera TK-340	
Kyocera FS-2100D/DN	L Kyocera TK-3100	
Kyocera FS-3040MFP/3140MFP/3920DN	L Kyocera TK-350	
Kyocera FS-3400/3400A/3400+/3600/3600A/3600+	L Kyocera TK-12 #	
Kyocera FS-3700/3700+/3750/6700/6900	L Kyocera TK-20H #	
Kyocera FS-3820N/3830N	L Kyocera TK-65 #	
Kyocera FS-3900DN	L Kyocera TK-310/TK-320	
Kyocera FS-400/400A	L Kyocera TK-11 #	
Kyocera FS-4000DN	L Kyocera TK-310/TK-320	[TK-330]
Kyocera FS-4020DN	L Kyocera TK-360	
Kyocera FS-4100DN	L Kyocera TK-3110	
Kyocera FS-4200DN/4300DN	L Kyocera TK-3130	
Kyocera FS-5900C/CN	L [Kyocera TK-81]	
Kyocera FS-600/680/800	L Kyocera TK-16H #	
Kyocera FS-6020/N	L Kyocera TK-400 #	
Kyocera FS-6025MFP/6030MFP	[Kyocera TK-475]	
Kyocera FS-6500/6500+	L Kyocera TK-12 #	
Kyocera FS-6950DN	L Kyocera TK-440 #	
Kyocera FS-6970DN	L [Kyocera TK-450]	
Kyocera FS-7000/7000+/9000,LS-7000	L Kyocera TK-30H #	
Kyocera FS-720/820/920	L Kyocera TK-110	
Kyocera FS-8000C/CD/CN/CDN	L [Kyocera TK-82]	
Kyocera FS-9100/9120DN/9500/9520DN	L Kyocera TK-70 #	
Kyocera FS-9130DN/9530DN	L Kyocera TK-710	
Kyocera FS-C1020MFP	Kyocera TK-150	
Kyocera FS-C2026MFP/C2126MFP/C5250DN	Kyocera TK-590K/C/M/Y	
Kyocera FS-C5015N	L Kyocera TK-520K/C/M/Y	
Kyocera FS-C5016N	L Kyocera TK-500K/C/M/Y #	
Kyocera FS-C5020N/C5025N/C5030N	L Kyocera TK-510K/C/M/Y	
Kyocera FS-C5100DN	L Kyocera TK-540K/C/M/Y	
Kyocera FS-C5150DN	Kyocera TK-580K/C/M/Y	
Kyocera FS-C5200DN	L [Kyocera TK-550K/C/M/Y]	
Kyocera FS-C5300DN/5350DN	L Kyocera TK-560K/C/M/Y	
Kyocera FS-C5400DN	L [Kyocera TK-570K/C/M/Y]	
Kyocera FS-C8008CN/N	L [Kyocera TK-800K/C/M/Y]	
Kyocera FS-C8020MFP/C8025MFP/C8520MFP/C8525MFP	Kyocera TK-895K/C/M/Y	
Kyocera FS-C8026N	L Kyocera TK-810 #	
Kyocera FS-C8100N	L [Kyocera TK-820K/C/M/Y]	
Kyocera FS-C8500DN	L [Kyocera TK-880K/C/M/Y]	
Kyocera FS-C8600DN/C8650DN	L [Kyocera TK-8600K/C/M/Y]	
Kyocera LS-1550/3550/6500/6550	L Kyocera TK-12 #	
Kyocera LS-1700	L Kyocera TK-20H #	
Lanier 2132		see Lanier Copiers
Lanier 2138c	L Ricoh AP3800C #	
Lanier 2145		see Lanier Copiers
Lanier 3120	Z Lexmark 13400HCE #	
Lexmark 4026	L Lexmark Optra E #	
Lexmark 4039-10 plus	L Lexmark Optra #	
Lexmark C2132	L [Lexmark 24B011/08/09/10]	

HAKUOPAS TULOSTIMIIN

Lexmark C500n/X500/X502	L [Lexmark C500]	
Lexmark C510	L Lexmark C510 #	
Lexmark C522/C524/C530/C532/C534	L Lexmark C522	
Lexmark C540/C543/C544/C546	L Lexmark C540	
Lexmark C720/dn/n	L Lexmark C720 #	
Lexmark C734/C736	L [Lexmark C734]	
Lexmark C746/C748	L [Lexmark C746]	
Lexmark C750/dn/n,X750e	L [Lexmark C750]	
Lexmark C752/C760/C762,X752e/X762e	L [Lexmark C752]	
Lexmark C770/C772/X772	L [Lexmark C770]	
Lexmark C780/C782/X782	L [Lexmark C780]	
Lexmark C792/X792	L [Lexmark C792]	
Lexmark C910/dn/n/C912,X912e	L [Lexmark C910]	
Lexmark C920	L [Lexmark C920]	
Lexmark C925	L [Lexmark C925]	
Lexmark C935	L [Lexmark C935]	
Lexmark C950	L [Lexmark C950]	
Lexmark Color Jetprinter 1000/1020/1100	Z Lexmark 13400HCE #	
Lexmark Color Jetprinter 2030/2050/2055/3000	Z Lexmark 13400HCE #	
Lexmark Color Jetprinter 2070	Z Lexmark 1382050 #	
Lexmark Color Jetprinter 3200/5000/5700	Z Lexmark 70/12AX970E #	
Lexmark Color Jetprinter 4079/plus	Z Canon BJI-643 #	
Lexmark Color Jetprinter 5770/7000/7200	Z Lexmark 70/12AX970E #	
Lexmark Color Jetprinter Z11/31/42/43/51/52/53	Z Lexmark 70/12AX970E #	
Lexmark Color Jetprinter Z12/Z22/Z32	Z Lexmark 50/17G0050E #	
Lexmark Color Jetprinter Z13/Z23/Z23e/Z33	Z Lexmark 16/10N0016E #	
Lexmark Color Jetprinter Z25/Z35	Z Lexmark 16/10N0016E #	
Lexmark Color Jetprinter Z45/Z45se/Z82	Z Lexmark 70/12AX970E #	
Lexmark Color Jetprinter Z55/se/Z65/n/p	Z Lexmark 82/18L0032E #	
Lexmark CS310/CS410/CS510	L Lexmark 702HK/C/M/Y	[702/X]
Lexmark CX310/CX410/CX510	L Lexmark 802SK/C/M/Y	[800/802]
Lexmark E120n	L Lexmark E120	
Lexmark E210	L Lexmark E210 #	
Lexmark E220/E321/E323	L Lexmark E220	
Lexmark E230/E232/E234/E330/E332	L Lexmark E230	
Lexmark E240/E340/E342	L Lexmark E230	
Lexmark E250/E350/E352	L Lexmark E250	
Lexmark E260/E360/E460/E462	L Lexmark E260	
Lexmark E320/E322/E322n	L Lexmark E320 #	
Lexmark E450	L [Lexmark E450]	
Lexmark F4270	Z Lexmark 70/12AX970E #	
Lexmark i3	Z Lexmark 16/10N0016E #	
Lexmark IJ4076/ExecJet II/lc	Z Lexmark 13400HCE #	
Lexmark J110/J110tn	Z Lexmark 11J3020 #	
Lexmark M1140/XM1140	L [Lexmark 24B6213]	
Lexmark M1145/XM1145	L [Lexmark 24B6035]	
Lexmark MS310/MS410/MS510/MS610	L Lexmark 502H	502[X/U/UA]
Lexmark MS312/MS415	L Lexmark 502	[502X/XA]512H
Lexmark MS710/MS711/MS810/MS811/MS812	L Lexmark 522H	[522X/XA]
Lexmark MX310/MX410/MX510/MX511/MX610/MX611	L Lexmark 602H	[602/X/XA]
Lexmark MX710/MX711/MX810/MX811/MX812	L Lexmark 622/H/HA/X/XA	Katun
Lexmark OfficeEdge Pro4000/Pro4000c/Pro5500/Pro5500t	Z Lexmark 210XL/14L0174E	[200/200XL]
Lexmark Optra C/C Pro ColorLaserPrinter	L Lexmark Optra C #	
Lexmark Optra C710/C710n/C710sx	L Lexmark Optra C710 #	
Lexmark Optra Color 1200/1200n/r	L Lexmark Optra Color 1200 #	
Lexmark Optra Color 40/40n/45/45n	Z Lexmark 70/12AX970E #	
Lexmark Optra E/E+/Ep/Es	L Lexmark Optra E #	
Lexmark Optra E310/E312/E312L	L Lexmark Optra E310 #	
Lexmark Optra K 1220	L Lexmark Optra K #	
Lexmark Optra L/Lx/Lx+/Lxi/Lxi+/Lxn+	L Lexmark Optra #	
Lexmark Optra M410/410n,M412/412n	L Lexmark Optra M #	
Lexmark Optra N/N Pro Laser	L HP LaserJet 5Si #	
Lexmark Optra R/Rx/R+/Rt+/Rn+/R+Pro	L Lexmark Optra #	
Lexmark Optra S 1250/n,1650/n,2450/n	L Lexmark Optra S #	
Lexmark Optra S 1255/n,1855/n,2455/n	L Lexmark Optra S #	
Lexmark Optra SC 1275/1275n	L Lexmark Optra SC #	
Lexmark Optra Se 3455/3455n	L Lexmark Optra Se #	
Lexmark Optra T610/sx,612/s,614/dx,616/n	L Lexmark Optra T610 #	
Lexmark Optra W810/dn/n/s	L Lexmark Optra W810 #	
Lexmark P315/P450	Z Lexmark 33/18C0033E #	

HAKUOPAS TULOSTIMIIN

Lexmark P3150	Z Lexmark 50/17G0050E #	
Lexmark P350	Z [Lexmark 43/Photo Kit]	
Lexmark P4330/P4350	Z Lexmark 32/18CX032E #	
Lexmark P6250/P6350	Z Lexmark 32/18CX032E #	
Lexmark P706/P707	Z Lexmark 50/17G0050E #	
Lexmark P910/P915	Z Lexmark 32/18CX032E #	
Lexmark Pro205/Pro705/Pro805/Pro901/Pro905	Z Lexmark 100/14N0820E	[100A/100XL/100XLA]
Lexmark Pro715/Pro915	Z Lexmark 150XL/14N1614E #	[150/150XLA]
Lexmark S305/S405/S505/S605	Z Lexmark 100/14N0820E	[100A/100XL/100XLA]
Lexmark S315/S415/S515/S615	Z Lexmark 150XL/14N1614E #	[150/150XLA]
Lexmark T420/T420d	L [Lexmark T420]	
Lexmark T430/d/dn	L [Lexmark T430]	
Lexmark T520/d/dn/n,T522/n	L Lexmark T520 #	
Lexmark T620/dn/in/n,T622/dn/in/n	L Lexmark T620 #	
Lexmark T630/T632/T634	L Lexmark T630	
Lexmark T640/T642/T644	L [Lexmark T640]	
Lexmark T650/T652/T654/T656	L Lexmark T650	
Lexmark Value Writer 300/600	L IBM 4037 #	
Lexmark W812/W812dtn/W812tn	L [Lexmark W812]	
Lexmark W820/dn/n,X820/e	L [Lexmark W820]	
Lexmark W840	L [Lexmark W840]	
Lexmark W850	L [Lexmark W850]	
Lexmark WinWriter 100/150c	Z Lexmark 13400HCE #	
Lexmark WinWriter 200	L Lexmark WinWriter 200 #	
Lexmark WinWriter 400	L IBM 4037 #	
Lexmark X1110/X1130/X1150/X1180/X1190	Z Lexmark 16/10N0016E #	
Lexmark X1270	Z Lexmark 16/10N0016E #	
Lexmark X203/X204	L Lexmark X203 #	
Lexmark X215	L Lexmark X215 #	
Lexmark X2250	Z Lexmark 16/10N0016E #	
Lexmark X2310/X2330/X2350	Z Lexmark 1/18CX781E	
Lexmark X2470	Z Lexmark 1/18CX781E	
Lexmark X2480/X3480	Z [Lexmark 2/18CX190E]	Gigantti
Lexmark X2530/X2550	Z [Lexmark 28/29/31/34/35]	
Lexmark X2620/X2650	Z [Lexmark 14/15/31]	
Lexmark X264/X363/X364	L [Lexmark X264]	
Lexmark X3330/X3350	Z Lexmark 32/13CX032E #	
Lexmark X340/X342	L Lexmark X340 #	
Lexmark X3470	Z Lexmark 1/18CX781E	
Lexmark X3550	Z [Lexmark 23/24/31/34/35]	
Lexmark X3650/X4650/X5650	Z [Lexmark 31/36/37]	
Lexmark X422 MFP	L [Lexmark X422]	
Lexmark X4250/X4270	Z Lexmark 70/12AX970E #	
Lexmark X4550	Z [Lexmark 23/24/31/34/35]	
Lexmark X463/X464/X466	L [Lexmark X463]	
Lexmark X4850/X4875	Z [Lexmark 40/41/42/43/44]	
Lexmark X5075/X5495	Z [Lexmark 28/29/31/34/35]	
Lexmark X5150/X5190	Z Lexmark 82/18L0032E #	
Lexmark X520/X522/X522s	L Lexmark T520 #	
Lexmark X5250/X5270/X5470	Z Lexmark 32/13CX032E #	
Lexmark X543/X544/X546/X548	L Lexmark C540	
Lexmark X560	L [Lexmark X560]	
Lexmark X6150/X6170/X6190	Z Lexmark 82/18L0032E #	
Lexmark X620/X620e	L Lexmark T620 #	
Lexmark X63/X73/X83/X85/X125	Z Lexmark 70/12AX970E #	
Lexmark X630/X632/X632e/X634	L Lexmark T630	
Lexmark X642e/X644e/X646e	L [Lexmark X642]	
Lexmark X651/X652/X654/X656/X65E	L [Lexmark X651]	
Lexmark X6570/X6575	Z [Lexmark 40/41/42/43/44]	
Lexmark X6650/X6675	Z [Lexmark 31/36/37]	
Lexmark X7170/X7350/X8350	Z Lexmark 32/13CX032E #	
Lexmark X720	L Lexmark C720	
Lexmark X734/X736/X738	L [Lexmark C734]	
Lexmark X746/X748	L [Lexmark X746]	
Lexmark X75	Z Lexmark 16/10N0016E #	
Lexmark X7675	Z [Lexmark 40/41/42/43/44]	
Lexmark X830e/X832e	L [Lexmark X830e]	
Lexmark X850e/X852e/X854e	L [Lexmark X850]	
Lexmark X860/X862/X864	L [Lexmark X860]	
Lexmark X925	L [Lexmark X925]	

HAKUOPAS TULOSTIMIIN

Lexmark X9350	Z [Lexmark 40/43/44]	
Lexmark X940/X945	L [Lexmark X940]	
Lexmark X950/X952/X954	L [Lexmark X950]	
Lexmark X9575	Z [Lexmark 40/41/42/43/44]	
Lexmark XC2130/XC2132	L [Lexmark 24B011/08/09/10]	
Lexmark Z1320	Z [Lexmark 28/29/31/34//35]	
Lexmark Z1420	Z [Lexmark 23/24/31/34/35]	
Lexmark Z1520	Z [Lexmark 40/41/42/43/44]	
Lexmark Z2320	Z [Lexmark 14/15/31]	
Lexmark Z2420	Z [Lexmark 31/36/37]	
Lexmark Z515/Z517	Z Lexmark 16/10N0016E #	
Lexmark Z602/Z604/Z605/Z615/Z645	Z Lexmark 16/10N0016E #	
Lexmark Z705	Z Lexmark 50/17G0050E #	
Lexmark Z730/Z735	Z Lexmark 1/18CX781E	
Lexmark Z815/816	Z Lexmark 32/13CX032E #	
Lexmark Z845	Z [Lexmark 28/29/31/34/35]	
Mannesmann Tally MT 93/94	Z Canon BJI-642 #	
Mannesmann Tally MT901	L NEC LC 800 #	
Mannesmann Tally MT904/905/906/908	L TEC 1305/MT904 #	
Mannesmann Tally MT910/920	L Kyocera TK-4 #	
Mannesmann Tally MT911	L Mannesmann T911 #	
Mannesmann Tally T7018/7040/7118/C	Z Olivetti FPJ 20 #	
Mannesmann Tally T9005/T9005PS	L Mannesmann T9005 #	
Mannesmann Tally T9008/T9012	L Mannesmann T9008 #	
Mannesmann Tally T9104w	L Mannesmann T9104w #	
Memorex 1808/1708	L Sanyo SPX-608 #	
Minolta CF 30	L Minolta Color PagePro #	
Minolta Color PagePro Ex/L/PCL/PS	L Minolta Color PagePro #	
Minolta magicolor 2/2+/2 DeskLaser	L	
Minolta magicolor 2200/DP/EN/GN/N	L Minolta magicolor 2200 #	
Minolta magicolor 2210/GN	L Minolta magicolor 2200 #	
Minolta magicolor 2300DL/2300W/2350	L Minolta magicolor 2300	
Minolta magicolor 3100/3100 SC	L Minolta magicolor 3100 #	
Minolta magicolor 330	L Xerox DocuColor 4CP #	
Minolta magicolor 6100/DP/EN/N,6110/GN	L	
Minolta PagePro 1100/1100L	L Minolta PagePro 8 #	
Minolta PagePro 12	L Minolta PagePro 12 #	
Minolta PagePro 1200W/1250E/1250W	L Minolta PagePro 8 #	
Minolta PagePro 18/18L/18N	L Minolta PagePro 18 #	
Minolta PagePro 20	L Minolta PagePro 20 #	
Minolta PagePro 25/25N	L Minolta PagePro 25 #	
Minolta PagePro 4100/E/GN/W	L Minolta PagePro 18 #	
Minolta PagePro 6/6E/6L	L Minolta PagePro 6 #	
Minolta PagePro 8/8e/8L	L Minolta PagePro 8 #	
Minolta PagePro 9100	L Minolta PagePro 9100 #	
Minolta SP101/3000/3500	L Epson EPL-7100 #	
Minolta SP1000/SP1500	L Epson EPL-5000 #	
Minolta WinLaser 400	L Lexmark WinWriter 200 #	
Mita DP-560/570/580	L Mita DP-500 #	
Mita LP2080/2085/3155	L Mita LP2080 #	
Mita PointSource Ci 40P/42P	L	
Nashuatec C7416/C7417/n/dn	L Ricoh 125	
Nashuatec C7425	L Ricoh 245	
Nashuatec C7435n		see Nashuatec copiers
Nashuatec C7526/C7531	L Ricoh 245	
Nashuatec P7026/P7126/P7132	L Ricoh 215	
Nashuatec P7027/P7032		see Gestetner copiers
Nashuatec P7145		see Nashuatec copiers
Nashuatec P7325/P7325n	L Ricoh 220 ?	
Nashuatec P7431c/cn	L Ricoh 140 ?	Lexmark C510 ?
Nashuatec SP C210	L Ricoh 140	
NEC 1700/1760	L Xerox 4517 #	
NEC LC08/800/815/850/860/866/890/2800	L NEC LC 800 #	
NEC S-w/S-S 610/610plus/640/660/660i	L NEC 600 #	
NEC Silentwriter 2-90/S60/S60P/S102	L NEC S60 #	
NEC Silentwriter 95/S62P	L NEC S60 #	
NEC Silentwriter LC266/290	L Canon EP-S #	
NEC Silentwriter/SuperScript 600	L NEC 600 #	
NEC SuperScript 1260/1262	L IBM NP 12 #	
NEC SuperScript 860	L NEC 800 #	

HAKUOPAS TULOSTIMIIN

NEC SuperScript 870	L NEC 870 #	
NewGen Turbo PS 300/360/400/480/630/660/840/880	L Canon EP-S #	
NewGen Turbo PS 300P/360P/400P/660P/880P	L Canon EP-L #	
NewGen Turbo PS 440B/660B/1200B	L HP C3900A #	
NewGen Turbo PS 440N/440ND	L HP LaserJet IIIiSi #	
Nixdorf MD 07	L NEC LC 800 #	
Nixdorf MD 12	L Qume CrystalPrint #	
Nixdorf ND 16	Z HP 51604A #	
Nokia 10/1000/2020	L Kyocera TK-4 #	
OKI B2200/B2400	L OKI B2200	
OKI B2500/B2520/B2540	L OKI B2500	
OKI B401	L OKI B401	
OKI B410/B430/B440	L OKI B410	
OKI B4100/B4200/B4250/B4300/B4350	L OKI B4200 #	
OKI B411/B412/B431/B432	L OKI B411	
OKI B412/B432/B512	L OKI B412	
OKI B4300/B4350	L OKI B4200/B4300 #	
OKI B4400/B4600	L OKI B4400	
OKI B4520/B4525/B4540/B4545	L OKI B4520 #	
OKI B6100/B6100dn/B6100n	L OKI B6100 #	
OKI B6200/B6250/B6300	L OKI B6200 #	
OKI B6500	L OKI B6500 #	
OKI B710/B720/B730	L OKI B710 #	
OKI B721/B731	L OKI B721	
OKI B8300	L OKI B8300 #	
OKI B840	L [OKI B840]	
OKI B930	L [OKI B930]	
OKI C110/C130n	L OKI C110	
OKI C301/C321	L OKI C301	
OKI C310/C330/C331/C510/C511/C530/C531	L OKI C310	
OKI C3100	L OKI C3100	
OKI C3200/C3200n	L OKI C3200 #	
OKI C3300/C3400/C3450/C3600	L OKI C3300	
OKI C3520/C3530	L OKI C3520	
OKI C5100n/C5200/C5300n/C5400	L OKI C5100	
OKI C5250/C5450/C5510/C5540	L OKI C5250	
OKI C5550/C5800/C5900	L OKI C5800 #	
OKI C5600/C5700	L OKI C5600	
OKI C5650/C5750	L OKI C5650	
OKI C5850/C5950	L OKI C5850	
OKI C610	L [OKI C610]	
OKI C7000 CCS,C7200/dn/n,C7400	L OKI C7000 #	
OKI C710/C711/C711WT	L [OKI C710]	C711WT white toner
OKI C7100/C7300/C7350/C7500	L OKI C7100 #	
OKI C801/C821	L [OKI C801]	
OKI C810/C830	L OKI C810	Katun
OKI C822	L [OKI C822]	
OKI C831/C841	L [OKI C831]	
OKI C8600/C8800	L [OKI C8600]	
OKI C910/C920WT	L [OKI C910]	C920WT white toner
OKI C9200/dn/n,C9400	L OKI C9200 #	
OKI C9300/dn/n,C9500/dn/hdn	L OKI C9300 #	
OKI C931	L [OKI C931]	
OKI C9600/C9650/C9800/C9850	L OKI C9600 #	
OKI C9655	L [OKI C9655]	
OKI DP-5000/5000s	Z OKI DP-5000 #	
OKI ES1624	L (OKI C5100, mutta chippi erilainen)	
OKI ES2232/ES2632/ES5460	L	
OKI ES2426	L	
OKI ES3032/ES7411	L	
OKI ES3640	L (OKI C9600, mutta chippi erilainen)	
OKI ES4131	L	
OKI ES4140	L (OKI B410, mutta chippi erilainen)	
OKI ES4160/ES4180/ES4191	L	
OKI ES5430/ES5431/ES5462	L	
OKI ES6150	L	
OKI ES6410	L	
OKI ES7120/ES7130/ES7131/ES7170/ES7411/ES7470/ES7480	L	
OKI ES8140/ES8430/ES8431/ES8441/ES8451	L	
OKI ES8460/ES8461	L	

HAKUOPAS TULOSTIMIIN

OKI ES9130/ES9160/ES9170	L	
OKI ES9410ES9431/ES9455/ES9460/ES9465/ES9470/ES9475	L	
OKI ES9541	L	
OKI Laserline 6	L Ricoh PC 6000 #	
OKI MB260/MB280/MB290	L OKI MB260 #	
OKI MB441/MB451	L OKI B401	
OKI MB460/MB470/MB480	L OKI B410	
OKI MB461/MB471/MB491	L OKI MB411	
OKI MB472/MB492/MB562	L OKI B412	
OKI MB760/MB770	L OKI B721	
OKI MC160	L OKI C110	
OKI MC332/MC342	L OKI C301	
OKI MC350/MC360	L OKI C3520	
OKI MC351/MC352/MC361/MC362/MC561/MC562	L OKI C310	
OKI MC560	L OKI C5850	
OKI MC760/MC770/MC780	L OKI MC760	
OKI MC851/MC861	L OKI MC851	Katun
OKI MC860	L [OKI MC860]	
OKI OkiJet 300c/2010	Z OKI OkiJet 300c #	
OKI Okioffice 44	L OKI Okipage 4w #	
OKI Okioffice 84/86/87	L OKI Okipage 8w Type 6 #	
OKI Okipage 10ex/10i/10iE/10iP	L OKI Okipage 10 Type 5 #	
OKI Okipage 12i/12n,12i/n	L OKI Okipage 10 Type 5 #	
OKI Okipage 14e	L OKI Okipage 10 Type 5 #	
OKI Okipage 14ex/14i,14i/n	L OKI Okipage 14 Type 8 #	
OKI Okipage 16n/16nE/16nPS	L OKI Okipage 16n #	
OKI Okipage 20n/20nE/20nP	L OKI Okipage 20 Type 7 #	
OKI Okipage 20n/dx,20nE/dx,20nP/dx	L OKI Okipage 20 Type 7 #	
OKI Okipage 20Plus,20Plus/n,24dx,24dx/n	L OKI Okipage 20 Type 7 #	
OKI Okipage 4m/4w/4wPlus	L OKI Okipage 4w #	
OKI Okipage 6a/6ea	L OKI Okipage 6a Type II-B #	
OKI Okipage 6e/6ex	L OKI OL 400e #	
OKI Okipage 6w	L OKI Okipage 8w Type 6 #	
OKI Okipage 8c/8cE/8cPlus	L OKI Okipage 8c #	
OKI Okipage 8iM/8p/8pPlus/8w/8wLite	L OKI Okipage 8w Type 6 #	
OKI OL 1200/1200ex	L OKI Okipage 16n #	
OKI OL 400/410/800/810/820/830/840/850	L OKI OL 400 #	
OKI OL 400e/ex,OL 400w,OL 410ex	L OKI OL 400e #	
OKI OL 600ea/610ea	L OKI Okipage 6a Type II-B #	
OKI OL 600ex,OL 610ex,OL 810ex	L OKI OL 400e #	
Olivetti ANY WAY	Z Olivetti IN 502 #	
Olivetti Artjet 10/12/20/22	Z Olivetti XP 01 #	
Olivetti Copy-Lab 200	Z Olivetti XP 01 #	
Olivetti d-Color P16	L	
Olivetti DP N24/N32/N40	L Xerox N24 #	
Olivetti Jet-Lab 500	Z Olivetti FPJ 20 #	
Olivetti Jet-Lab 600	Z Olivetti XP 11 #	
Olivetti Jetwriter 900/910	Z Olivetti PJ 11 #	
Olivetti Job-Jet M400	Z HP C6656AE N:o 56	
Olivetti Job-Jet P200	Z HP 51645AE N:o 45	
Olivetti JP 50/70/90	Z Olivetti PJ 11 #	
Olivetti JP 150/150W/350	Z Olivetti FPJ 20 #	
Olivetti JP 150WS/170/C/S/190/192/250/270	Z Olivetti FPJ 20 #	
Olivetti JP 350S/WS/360/370/450/470	Z Olivetti FPJ 20 #	
Olivetti JP 790/792/795/883	Z Olivetti JP 790 #	
Olivetti MY WAY	Z Olivetti IN P08 #	
Olivetti Nomad-Jet 100	Z Olivetti PJ 11 #	
Olivetti PG 108/208/303	L Canon EP-S #	
Olivetti PG 306/308/404/408	L TEC 1305/MT904 #	
Olivetti PG L12	L Xerox 4512 #	
Olivetti PG L12en	L Olivetti PG L12en #	
Olivetti PG L12 L	L Xerox P1202 #	
Olivetti PG L17,DP N17	L Xerox 4517 #	
Olivetti PG L6	L Olivetti PG L6 #	
Olivetti PG L8	L Xerox 4508 #	
Olivetti PG L8en	L Olivetti PG L8en #	
Olivetti PG L8 L	L Xerox P8e #	
Olivetti StudioJet 300	Z Olivetti XP 01 #	
Panasonic KX-P 4400/4401/5400	L Panasonic KX-P 455 #	
Panasonic KX-P 4410/4430/4440/5410	L Panasonic KX-P 453 #	

HAKUOPAS TULOSTIMIIN

Panasonic KX-P 4420	L Panasonic KX-P 451 #	
Panasonic KX-P 4450/4450i/4451/4455/4495	L Panasonic KX-P 450i #	
Panasonic KX-P 6100/6150	L Panasonic KX-P 457 #	
Panasonic KX-P 6300/6500/6600	L Panasonic KX-P 459 #	
Panasonic KX-P 7100/7105/7110	L Panasonic KX-PDP8 #	
Panasonic KX-P 7200	L Panasonic KX-PEP6 #	
Panasonic KX-P 8410/8420	L Panasonic KX-P 8410 #	
Panasonic KX-P 8415	L Panasonic KX-P 8415 #	
Panasonic KX-PS600	L Panasonic KX-P 459 #	
Panasonic KX-PS8000/8100	L Panasonic KX-P 8410 #	
Panasonic KX-SP100	L Panasonic KX-P 455 #	
Panasonic UF-342/344	Z Canon BC-20	
Philips 1474/1480/1481	L TEC 1305/MT904 #	
Pinus P7021	L Ricoh Type 2000 #	
QMS 1500	L Ricoh Tonerkit 80 #	
QMS 2060BX/EX/GX/WX	L Minolta/QMS 2060 #	
QMS 2425	L HP LaserJet 5Si #	
QMS 2560 BX/EX/EXS/GX	L	
QMS 3260/4032 CX/EX/EXS	L	
QMS DeskLaser 1400/1600P	L QMS 1400 #	
QMS DeskLaser 2000/Net/XNet	L Minolta/QMS 2060 #	
QMS DeskLaser 600	L QMS 600 #	
QMS Magicolor CX/WX		
QMS Magicolor 330	L Xerox DocuColor 4CP #	
QMS PS1060/1060E/1060Ex	L Epson EPL-5000 #	
QMS PS1700/1725	L HP LaserJet IIISi #	
QMS PS2200/2210/2220	L QMS PS2200 #	
QMS PS410/420	L Canon EP-L #	
QMS PS800,II800	L Canon EP #	
QMS PS810/815/820/825/2308	L Canon EP-S #	
QMS PS860/1660/1660E/1660Ex	L HP C3900A #	
Qume CrystalPrint/WP, Series II, Publisher	L Qume CrystalPrint #	
Ricoh 3080/4080/4081/4150	L Ricoh Tonerkit 80 #	
Ricoh 680MP	Z Lexmark 13400HCE #	
Ricoh 880MP	Z Canon BC-20	
Ricoh AP1400/AP1600	L Ricoh 1400 #	
Ricoh AP1610/AP1610N	L Ricoh 1610 #	
Ricoh AP1910/AP1910N	L [Ricoh 1910]	
Ricoh AP2000/AP2000N/AP2100	L Ricoh 2000 #	
Ricoh AP2600/AP2600N/AP2610/AP2610N	L Ricoh 215	
Ricoh AP2700/AP3200		see Ricoh copiers
Ricoh AP3800C/AP3800C MF	L Ricoh 205/105 #	
Ricoh AP400/AP400N/AP410/AP410N	L Ricoh 220	
Ricoh AP4500/AP4510		see Ricoh copiers
Ricoh AP600N/AP610N	L Ricoh 215	
Ricoh AP900		see Ricoh copiers
Ricoh BP20/BP20N	L Ricoh BP22 #	
Ricoh CL1000/CL1000N	L Ricoh 140	
Ricoh CL2000/CL2000N	L Ricoh 125	
Ricoh CL3000/CL3000DN/CL3100	L Ricoh 125	
Ricoh CL3500/CL3500DN	L Ricoh 165	
Ricoh CL4000/DN/HDN	L Ricoh 245	
Ricoh CL5000	L Ricoh 110 #	
Ricoh CL7000/CL7000MF/CL7100	L Ricoh 205/105 #	
Ricoh CL7200/CL7300	L Ricoh 260 #	
Ricoh CL800	L Ricoh 140	
Ricoh GX 2500/GX 3000/GX 3050N/GX 5050N/GX 7000	Z Ricoh GC 21K #	
Ricoh GX 5050N/GX 7000	Z Ricoh GC 21K #	[GC 21KH]
Ricoh GX e2600/GX e3300N/GX e3350N/GX e5550N	Z Ricoh GC 31K #	
Ricoh LP 1060,PC 6000/6080	L Ricoh PC 6000 #	
Ricoh SP 1000		see Ricoh copiers
Ricoh SP 300DN	L Ricoh SP 300	
Ricoh SP 3200		see Ricoh copiers
Ricoh SP 3300D/DN	L Ricoh SP 3300E	
Ricoh SP 3500/3510	L Ricoh SP 3500EX	
Ricoh SP 4100N/SP 4110N/SP 4210N/SP 4310N	L Ricoh SP 4100	
Ricoh SP 4100NL	L Ricoh SP 4100L	
Ricoh SP 5100N	L Ricoh SP 5100E	
Ricoh SP 5200/SP 5210	L [Ricoh SP 5200]	
Ricoh SP 6330N	L Ricoh SP 6330E	

HAKUOPAS TULOSTIMIIN

Ricoh SP 6430	L [Ricoh SP 6430]	
Ricoh SP 8100DN		see Ricoh copiers
Ricoh SP 8200DN/SP 8300DN	L [Ricoh SP 8200]	
Ricoh SP 9100DN		see Ricoh copiers
Ricoh SP C210	L Ricoh 140	
Ricoh SP C220/SP C221/SP C222		see Ricoh copiers
Ricoh SP C231/C232/C242/C311N/C312DN/C320DN	L Ricoh SP C310HE	
Ricoh SP C410/C411/C420	L Ricoh 245	
Ricoh SP C430DN/C431DN	L Ricoh SP C430E	
Ricoh SP C730DN	L [Ricoh SP C730 Bk/C/M/Y]	
Ricoh SP C811DN	L Ricoh SP C811	
Ricoh SP C820DN/C821DN	L Ricoh SP C820DNHE	
Samsung CJX-1000/1050W/2000FW	Z [Samsung INK M210/C210]	
Samsung CLP-300/N	L Samsung CLP-K300A	
Samsung CLP-310/315	L Samsung CLT-K4092S	
Samsung CLP-320/325	L Samsung CLT-K4072S	
Samsung CLP-350N	L Samsung CLP-K350A #	
Samsung CLP-500/N,550/N	L Samsung CLP-500D	
Samsung CLP-510/N,511,515	L Samsung CLP-510D #	
Samsung CLP-600/N,650/N	L Samsung CLP-K600A	
Samsung CLP-610ND,660N/ND	L Samsung CLP-K660B	
Samsung CLP-620/670	L Samsung CLT-K5082L	[CLT-K5082S]
Samsung CLP-770ND	L [Samsung CLP-K609S]	
Samsung CLX-2160N/3160FN	L Samsung CLP-K300A	
Samsung CLX-3170/3175	L Samsung CLT-K4092S	
Samsung CLX-3185	L Samsung CLT-K4072S	
Samsung CLX-6200/6210/6240	L Samsung CLP-K660B	
Samsung CLX-6220/6250	L Samsung CLT-K5082L	[CLT-K5082S]
Samsung CLX-8380	L [Samsung CLX-K838A]	
Samsung ML-1210/1220/1250	L Samsung ML-1210D3	
Samsung ML-1440/1450/1451N/6060/N/S	L Samsung ML-6060D6 #	
Samsung ML-1510/1710/P/1740/1750	L Samsung ML-1710D3	
Samsung ML-1520/1520P	L Samsung ML-1520D3 #	
Samsung ML-1610/1620	L Samsung ML-1610D2	
Samsung ML-1630	L Samsung ML-D1630A	
Samsung ML-1640/2240	L Samsung MLT-D1082S	
Samsung ML-1660/1665/1670/1675/1860/1865	L Samsung MLT-D1042S	
Samsung ML-1674	L [Samsung MLT-D104S]	Gigantti
Samsung ML-1910/1915/2525/2540/R,2545/2580N	L Samsung MLT-D1052L	[MLT-D1052S]
Samsung ML-2010	L Samsung ML-2010D3	
Samsung ML-2150/2151N/2152W	L Samsung ML-2150D8 #	
Samsung ML-2160/2162/2165/2168	L Samsung MLT-D101S	
Samsung ML-2250/2251N/NP,2252W	L Samsung ML-2250D5 #	
Samsung ML-2510/2570/2571N	L Samsung ML-2010D3	
Samsung ML-2550/2551N/2552W	L Samsung ML-2550DA #	
Samsung ML-2850D/2851ND	L Samsung ML-D2850B	[ML-D2850A]
Samsung ML-2855ND	L Samsung MLT-D2092L	[MLT-D2092S]
Samsung ML-2950/2955	L Samsung MLT-D103L	
Samsung ML-3050/3051N/3051ND	L Samsung ML-D3050B	[ML-D3050A]
Samsung ML-3310/3312/3710/3712	L Samsung MLT-D205L	MLT-D205E
Samsung ML-3470D/3471ND	L Samsung ML-D3470A	[ML-D3470B]
Samsung ML-3561N/ND	L Samsung ML-3560D6 #	[ML-3560DB]
Samsung ML-3750	L [Samsung MLT-D305L]	
Samsung ML-4050N/4551ND	L Samsung ML-D4550A	[ML-D4550B]
Samsung ML-4510ND/5010ND/5015ND	L Samsung MLT-D307L	[MLT-D307S/E]
Samsung ML-5510ND/5512ND/6510ND/6512ND	L Samsung MLT-D309L	[MLT-D309S]
Samsung ML-7300/7300N	L Samsung ML-7300DA #	
Samsung ProXpress M3325,M3375,M3825,M3875,M4025,M4075	L Samsung MLT-D204L	MLT-D204E
Samsung SL-M2020/M2022/M2070	L Samsung MLT-D111S	
Samsung SL-M2625/M2675/M2825/M2875	L Samsung MLT-D116S	MLT-D116L
Samsung Xpress M2020/M2022/M2070	L Samsung MLT-D111S	
Samsung Xpress M2625/M2675/M2825/M2875	L Samsung MLT-D116S	MLT-D116L
Sanyo SPX-608/664	L Sanyo SPX-608 #	
Seikosha OP-105A	L Fujitsu #	
Seikosha SpeedJet 200	Z Olivetti FPJ 20 #	
Seikosha SpeedJet 300/360	Z Seikosha SpeedJet 300 #	
Sharp DX-B350	L [Sharp DX-B35DTH]	
Sharp DX-B450	L [Sharp DX-B45DTH]	
Sharp DX-C200	L [Sharp DX-C20TB/TC/TM/TY]	
Sharp FO-2150CM/2550CM	Z Sharp FO-21BC #	

HAKUOPAS TULOSTIMIIN

Sharp JX-8200	L Xerox C55 #	
Sharp JX-9200/9210/9230	L Sharp JX-92TC #	
Sharp JX-9300	L Sharp JX-93TC #	
Sharp JX-9400/9400H/9460/9600/9660/9680	L Sharp JX-96DC #	
Sharp JX-9500/9500PS/9500E/H	L Sharp JX-95TC	
Sharp JX-9700	L Sharp JX-97TC #	
Siemens 2522/2523/2552/9022/9200/9300	L NEC LC 800 #	
Siemens PT 10,DR 400	L Canon EP-S #	
Siemens PT88S/89S/90	Z Siemens PT88S #	
Star Laser 4/4III	L Canon EP-L #	
Star Laser 8/8II/8III	L Canon EP-S #	
Star LS-5/5PT/5EX,EP-X	L Apple #	
Star WinType 4000	L Star WinType 4000 #	
Tally T3010/T3010S/T3110	Z	
Tally T3016/T3116	Z	
Tally T7010/7110	Z Olivetti PJ 11 #	
Tally T7012CF	Z Olivetti XP 01 #	
Tally T7060/T7160/T7260	Z Olivetti JP 790 #	
Tally T8004	L	
Tally T8006e/T8106/T8106Plus	L	
Tally T8104/Plus	L	
Tally T8406/T8406Plus	L	
Tally T9006	L	
Tally T9112/9116D	L	
Tally T9208/9208N	L	
Tandon Laserprinter	L Sharp JX-95TC	
TEC 1305/1306/1321/1323	L TEC 1305/MT904 #	
Tektronix Phaser 1235	L Xerox Phaser 1235 #	
Tektronix Phaser 780	L Xerox DocuColor 4CP #	
Telia 770F Fax	Z Lexmark 13400HCE #	
Telia 850 Fax	F Toshiba TK-12	
TI Microlaser Plus/17/35/3206/Turbo	L Sharp JX-95TC	
TI Microlaser Pro 8/Pro 300/Pro 600	L Sharp JX-96DC #	
TI Microlaser XL/XL PS17/XL PS35	L Sharp JX-97TC #	
TI Microwriter	L Mannesmann Tally T9005 #	
TI Omnilaser 2015/2108/2115	L Ricoh Tonerkit 80 #	
TI Omnilaser 2106	L Ricoh PC 6000 #	
Toshiba e-STUDIO 180CP	L Toshiba 180CP #	
Toshiba e-STUDIO 205CP	L [Toshiba e-STUDIO 205CP]	
Toshiba		
Toshiba e-STUDIO 250CP	L [Toshiba 15G442K/C/M/Y]	
Toshiba e-STUDIO 270P/300P	L Toshiba 270P #	
Toshiba e-STUDIO 320P	L [Toshiba TAM7415]	
Toshiba		
Toshiba e-STUDIO 500P	L [Toshiba e-STUDIO 500P]	
Toshiba LP 1500/2500/3500	L	
Toshiba Pagelaser 12	L Dataprod. LZR-1200 #	
Toshiba Pagelaser 6/8, GX 200	L TEC 1305/MT904 #	
Toshiba TF-461	Z Lexmark 13400HCE #	
Unisys 27/37/2010/0478	L Kyocera TK-4 #	
Unisys AP 9204/9206	L Ricoh PC 6000 #	
Unisys AP 9205/9210	L IBM 4019 #	
Unisys AP 9208/9415	L Ricoh Tonerkit 80 #	
Unisys AP 9216/9310/9312/9316	L IBM 4039 #	
Unisys AP 9510/9512/9516,UDS 9616	L Lexmark Optra #	
Unisys UDS 9606	L Lexmark Optra E #	
Unisys UDS 9612C	L Lexmark Optra C #	
Unisys UDS 9624	L HP LaserJet 5Si #	
Unisys UDS 9712/9716/9724	L Lexmark Optra S #	
Versatec 8836	L Versatec #	
Wang LCS15	L Ricoh Tonerkit 80 #	
Wang LCS 8,LDP 8	L Canon EP-S #	
Wang LIS 12/24	L Xerox 4030 #	
Victor VP-04	L Canon EP-L #	
Xerox 2260ij	L [026R09950/1/2/3]	
Xerox 3002/3004/3006/4004	Z Xerox 008R07638 #	
Xerox 3010/4030/4197/6522	L Xerox 4030 #	
Xerox 4010	L TEC 1305/MT904 #	
Xerox 4045/4046/6085	L Xerox 4045 #	
Xerox 4050/4250/4090/4450/4490/4650/5088/5388	L Xerox 4050 #	

HAKUOPAS TULOSTIMIIN

Xerox 4110/4112/4127/4590/4595	L [Xerox 4110]	
Xerox 4213	L Xerox 4213 #	
Xerox 4215/MRP,4219/MRP,4520/4520mp	L Xerox 4215 #	
Xerox 4220,4230/MRP,4232	L Xerox 4220 #	
Xerox 4505/4505ps/4510/4510ps	L Xerox 4505/Apple #	
Xerox 8142/8160	Z [omat inkit]	
Xerox 8810/8812	L Xerox 4215 #	
Xerox 8836	L Versatec #	
Xerox ColorQube 8570/8580	Z Xerox ColorQube 8570 K/C/M/Y	Katun
Xerox ColorQube 8700/8900		vaha K/C/M/Y
Xerox ColorQube 8870		vaha K/C/M/Y
Xerox ColorQube 9201/9202/9203/9301/9302/9303		vaha K/C/M/Y
Xerox CopyCentre C32/C40	L Xerox DocuColor 1632	
Xerox DocuColor 12/DC 12	L Xerox DocuColor 12	
Xerox DocuColor 1632/2240/3535	L Xerox DocuColor 1632	
Xerox DocuColor 2006	L	
Xerox DocuColor 2045/2060/5252/6060	L	
Xerox DocuColor 4CP/4LP	L Xerox DocuColor 4CP #	
Xerox DocumentCentre ColorSeries 50/DC CS 50	L Xerox DocuColor 12	
Xerox DocuPrint 350/390	L Xerox 4050 #	
Xerox DocuPrint 4508	L Xerox 4508 #	
Xerox DocuPrint 4512/M/N	L Xerox 4512 #	
Xerox DocuPrint 4517/N17/N17CN/TD	L Xerox 4517 #	
Xerox DocuPrint C11/C15	Z Xerox 008R07903 #	
Xerox DocuPrint C20/NC20	Z Xerox 008R07881 #	
Xerox DocuPrint C55/C55mp/NC60	L Xerox C55 #	
Xerox DocuPrint C6	Z Xerox 008R07999 #	
Xerox DocuPrint C8	Z Xerox 008R07638/999 #	
Xerox DocuPrint M750/M760	Z Xerox 008R07969 #	
Xerox DocuPrint N2025/N2825	L Xerox N2025 #	
Xerox DocuPrint N2125/N2125b/N2125N	L Xerox N2125 #	
Xerox DocuPrint N24/N32/N40	L Xerox N24 #	
Xerox DocuPrint N3225/N4025	L Xerox N24 #	
Xerox DocuPrint N4525/cn/dx/fn	L Xerox N4525 #	
Xerox DocuPrint P12	L IBM NP 12 #	
Xerox DocuPrint P1202	L Xerox P1202 #	
Xerox DocuPrint P1210	L Xerox P1210 #	
Xerox DocuPrint P8e/P8ex	L Xerox P8e #	
Xerox DocuPrint XJ4C/DWC 450c	Z Xerox 008R07638/659 #	
Xerox DocuPrint XJ6C/DWC 450cp	Z Xerox 008R07638/871 #	
Xerox DocuPrint XJ8C/XJ9C	Z Xerox 008R07881 #	
Xerox DocuTech 90	L Xerox 4050 #	
Xerox Phaser 1235/DT/DX/N	L Xerox Phaser 1235 #	
Xerox Phaser 2135/DT/DX/N	L Xerox Phaser 2135 #	
Xerox Phaser 3100MFP	L Xerox Phaser 3100	
Xerox Phaser 3115/3120/3121/3130	L Xerox Phaser 3130	
Xerox Phaser 3117/3122	L Xerox Phaser 3117	
Xerox Phaser 3150	L Xerox Phaser 3150	
Xerox Phaser 3200	L Xerox Phaser 3200	
Xerox Phaser 3250	L Xerox Phaser 3250	
Xerox Phaser 3300MFP	L Xerox Phaser 3300	
Xerox Phaser 3320	L Xerox Phaser 3320	
Xerox Phaser 3400/3400B/3400N	L Xerox Phaser 3400	
Xerox Phaser 3435	L [Xerox Phaser 3435]	
Xerox Phaser 3450	L Xerox Phaser 3450	
Xerox Phaser 3500	L Xerox Phaser 3500 #	
Xerox Phaser 3600	L Xerox Phaser 3600	
Xerox Phaser 3610	L Xerox Phaser 3610	
Xerox Phaser 3635MFP	L Xerox Phaser 3635	
Xerox Phaser 4400	L Xerox Phaser 4400 #	
Xerox Phaser 4500	L Xerox Phaser 4500	
Xerox Phaser 4510	L [Xerox Phaser 4510]	
Xerox Phaser 4600/4620/4622	L Xerox Phaser 4600	
Xerox Phaser 5400/5400N	L [Xerox Phaser 5400]	
Xerox Phaser 5500	L Xerox Phaser 5500 #	
Xerox Phaser 5550	L [Xerox Phaser 5550]	
Xerox Phaser 6000/6010	L Xerox Phaser 6000 K/C/M/Y	
Xerox Phaser 6100	L [Xerox Phaser 6100 K/C/M/Y]	
Xerox Phaser 6110/6110MFP	L Xerox Phaser 6110	

HAKUOPAS TULOSTIMIIN

Xerox Phaser 6115MFP/6120	L [Xerox Phaser 6120 K/C/M/Y]	
Xerox Phaser 6121MFP	L [Xerox Phaser 6121 K/C/M/Y]	
Xerox Phaser 6125	L Xerox Phaser 6125	
Xerox Phaser 6128	L [Xerox Phaser 6128 K/C/M/Y]	
Xerox Phaser 6130	L [Xerox Phaser 6130 K/C/M/Y]	
Xerox Phaser 6140	L [Xerox Phaser 6140 K/C/M/Y]	
Xerox Phaser 6180	L [Xerox Phaser 6180 K/C/M/Y]	
Xerox Phaser 6200/6200N/DP	L [Xerox Phaser 6200 K/C/M/Y]	
Xerox Phaser 6250	L [Xerox Phaser 6250 K/C/M/Y]	
Xerox Phaser 6280	L [Xerox Phaser 6280 K/C/M/Y]	
Xerox Phaser 6300/6350	L Xerox Phaser 6300 #	
Xerox Phaser 6360	L [Xerox Phaser 6360 K/C/M/Y]	
Xerox Phaser 6500	L Xerox Phaser 6500 K/C/M/Y Katun	
Xerox Phaser 6600	L Xerox Phaser 6600K/C/M/Y	
Xerox Phaser 6700	L [Xerox Phaser 6700 K/C/M/Y]	
Xerox Phaser 7100	L [Xerox Phaser 7100 K/C/M/Y]	
Xerox Phaser 7300	L [Xerox Phaser 7300 K/C/M/Y]	
Xerox Phaser 7400	L [Xerox Phaser 7400 K/C/M/Y]	
Xerox Phaser 7500	L [Xerox Phaser 7500 K/C/M/Y]	
Xerox Phaser 7700/DN/DX/GX/N	L Xerox Phaser 7700 #	
Xerox Phaser 7750/EX7750	L [Xerox Phaser 7750 K/C/M/Y]	
Xerox Phaser 7760	L [Xerox Phaser 7760 K/C/M/Y]	
Xerox Phaser 780	L Xerox DocuColor 4CP #	
Xerox Phaser 7800	L [Xerox Phaser 7800 K/C/M/Y]	
Xerox Phaser 8200/8200N		vaha
Xerox Phaser 8400		vaha
Xerox Phaser 8500/8550		vaha
Xerox Phaser 8560/8560MFP	Z Xerox Phaser 8560 K/C/M/Y	Katun
Xerox Phaser 860/DP/DX/N		vaha
Xerox Phaser 8860		vaha
Xerox Phaser 8870/8880		vaha
Xerox WorkCenter 150/250/450c/450cp	Z Xerox 008R07638 #	
Xerox WorkCentre 155/165/165c/3003	Z Olivetti FPJ 20 #	
Xerox WorkCentre 385	L Xerox P8e #	
Xerox WorkCentre 390	L Xerox WorkCentre 390 #	
Xerox WorkCentre 470cx/480cx/490cx	Z Xerox 008R07881 #	
Xerox WorkCentre 6015	L Xerox Phaser 6000 K/C/M/Y	
Xerox WorkCentre 6505	L Xerox Phaser 6500 K/C/M/Y Katun	
Xerox WorkCentre 6605	L Xerox Phaser 6600	
Xerox WorkCentre 7001/7015/7022/7023/7051	Z Olivetti FPJ 20 #	
Xerox WorkCentre C2424		vaha
Xerox WorkCentre Pro 32/40	L Xerox DocuColor 1632	
Xerox WorkCentre M24	L Xerox WorkCentre M24 #	
Xerox WorkCentre M940/M950	Z Xerox 008R07969 #	
Xerox WorkCentre Xi70c	Z Xerox 008R07903 #	
Xerox WorkCentre XK35c/XK50cx	Z Xerox 008R07881 #	